



Manual

SPEEDWAY SW500 SERIES

**Copyright 2016 © Supra Enterprises Corp.
Wholesale And Retail Sewing Machines Miami FL**

Address: 7630NW 25Th St. Unit 3&4 Miami, FL 33122
Phone numbers: Ph: (305)-406-1067 Fax: (305)-406-1068



PEGASUS®

W1500 Series

Thank you very much for purchasing Pegasus W1500 Series machine.

This instruction manual describes daily routine maintenance and safety precautions to keep the machine in the best possible conditions.

Please study this manual very carefully before operating the machine.

2 or 3-needle flatbed interlock stitch machine

INSTRUCTIONS

CONTENTS

Copyright	1	Adjusting the feed dog height	21
Directives	1	Adjusting the presser foot lift	21
1.Introduction	2	Adjusting the needle height	22
2.Indications of dangers, warnings & cautions ·	2-3	Adjusting the looper	23
3.Safety precautions	3-4	Adjusting the needle guard (rear)	24
4.Notes for each procedure	4-6	Adjusting the needle guard (front)	24
5.Location of warning labels and safety devices ···	7	Changing the maximum differential feed ratio	25
6.Protectors for safety	8	Checking and cleaning the oil filter	26
Assembling the machine rest board	9	Adjusting the amount of backward tilt on the presser foot (for W1562-05)	27
Sewing machine installation	9	FT device (for W1562-05)	
Installing the belt cover	9	Manual lubrication	27
Operating direction of the machine pulley	9	Adjusting the fabric guide	27
Lubrication	10	Replacing the upper knife	27
Silicone oil for H.R. device	11	Replacing the lower knife	28
Threading	12-13	Adjusting overlap of the knife cutting edges	28
Adjusting presser foot pressure	14	Adjusting the lower knife holder left to right	28
Adjusting the differential feed ratio	14	MD device (for W1562-05)	
Adjusting stitch length	14	Installing the lace guide	29
Adjusting the thread tension	15	Greasing	29
Cleaning the machine	15	Adjusting the lace guide (lower)	29
Replacing the needle	16	Adjusting the elastic guide	30
Oil replacement	16	Adjusting the feeding amount of the elastic	30
To drain the oil	16	Adjusting the roller pressure	30
Adjusting the needle thread guard	17	Inserting the elastic into the roller	31
Adjusting the needle thread guides	17	Adjustment dimensions	
Adjusting the looper thread take-up	18	Comparison table of equivalent sizes	
Adjusting the looper thread guides	18	Standard needle	32
Adjusting the spreader	19	Subclass specifications	33
Adjusting the top cover thread guide	20		

Be sure to study very carefully **for safety.**

Copyright

● This instruction manual may not be reproduced, transcribed, transmitted, distributed or translated into any language, in whole or part, in any form or through a paper or electronic medium, without the prior written permission from Pegasus Sewing Machine Mfg. Co., Ltd.

● **Disclaimer**

The contents described in this instruction manual are intended for giving information and subject to change without notice. We assume no responsibility for these information, and any errors and/or incorrect descriptions that may appear in this instruction manual.

● Pegasus Sewing Machine Mfg. Co., Ltd. has a policy that we always modify the performance and/or specifications of this product introducing the state-of-the-art technology. Accordingly we reserve the right to change the specifications and/or design without notice.

● This instruction manual is valid for all the models and subclasses listed in the chapter "Specifications."

Directives

This machine is constructed in accordance with the European regulations contained in the conformity and manufacturer's declarations. In addition to this instruction manual, strictly observe all the generally accepted, statutory regulations, legal requirements and all the environmental protection regulations.

Also rigidly adhere to the regionally valid regulations of the social insurance society for occupational accidents or other supervisory organizations.

1.Introduction

- This is the instruction manual that describes how to use this product safely.
- Read this instruction manual and learn very carefully how to operate, adjust and service this sewing machine before beginning any of the procedures.
- You should realize first that there is always the risk of contacting moving parts, such as needles because you have to work at point-blank range to them when you are operating industrial sewing machines.
For safety it is essential that we supply safe products and you use them correctly and safely.
There may be some safety measures that you yourself must take.
Therefore, you should read and understand very carefully this instruction manual together with that of the driving equipment and take necessary safety measures in order to use this machine efficiently and effectively.

2.Indications of dangers, warnings and cautions

To prevent accidents and ensure safety, warning indications which show the degree of danger are used on our products and in this manual.




Study the contents of these indications carefully and follow all warnings and instructions.

Indication labels should be found easily.









Attach new labels when they are stained or removed.

Contact our sales office when new labels are needed.

Symbols, signs and/or signal words which attract users' attention

 DANGER	Indicates an immediate hazard to life or limb.
 WARNING	Indicates a potential hazard to life or limb.
 CAUTION	Indicates a possible mistake that could result in injury or damage.

Symbols and messages

	Be sure to follow the instructions when you operate the machine and/or labor saving device.
	If you use the machine and/or labor saving device incorrectly, you may get an electrical shock.
	If you use the machine and/or labor saving device incorrectly, your hands and/or fingers may be injured.
	Indicates a danger of burn injury due to high temperature.
	Never do this.
	Unplug the machine or shut off the power when checking, adjusting and/or repairing the machine and/or labor saving device, or when lightning may strike.
	Be sure to ground the machine and labor saving device securely.
	Denotes the normal rotating direction of the machine pulley.

3.Safety precautions

①Applications, purpose

Our industrial sewing machines have been developed in order to increase quality and/or production in the sewing industry. Accordingly never use our products for other than intended use described above.

②Circumstances

The environment in which our industrial sewing machines are used may seriously affect their lives, functions, performance and/or safety.



For safety, do not use the machine under the circumstances below.

- 1.Do not use the machine near objects which make noise such as a high-frequency welder, etc.
- 2.Do not use or store the machine in the air which has vapor from chemicals, or do not expose the device to chemicals.
- 3.Do not leave the machine outside, in high temperatures or the direct sun.
- 4.Do not use the machine in the places of high ambient temperature and humidity that seriously affects sewing machines.

5.Do not use the machine on the condition that the voltage fluctuation range is more than $\pm 10\%$ of the rated voltage.

6.Do not use the machine in the place where the supply voltage specified for the control motor cannot be properly obtained.

③Safety measures



(1)Safety precautions when you perform maintenance on the machine.

- Always turn off the power, unplug the machine and then make sure that the machine does not run by pressing the treadle before performing any maintenance, such as checking, repairing, cleaning, etc. However, if you need to perform these procedures with the power on, to prevent accidents due to the unexpected start of the machine and users' misoperation, establish your own procedures for safety and follow them.



●Always turn off the power and unplug the machine before performing the procedures shown below.

- Lubrication
- Threading
- Cleaning
- Replacing the needle
- Checking/replacing the oil element
- Replacing the oil

- Always turn off the power before performing the procedures shown below.

- Adjusting the stitch length
- Adjusting the differential feed ratio

- Only well-trained people should perform routine daily maintenance and/or repair the machine.



- Do not modify the machine yourself.

※ Consult your local Pegasus' sales office or representative for modification.




(2) Before operating the machine

- Check the machine head and unit for any damage and/or faulty function at the start of each day.


If there should be something wrong with the machine, immediately perform repairs and/or other necessary procedures.

- Check by hand to see if the needle holder is secured.
※ Be careful of the needle point.

- Before starting the machine, make sure that the presser foot is positioned correctly (turn the machine pulley slowly by hand to see if the needle point is centered in the needle drop hole on the presser foot).

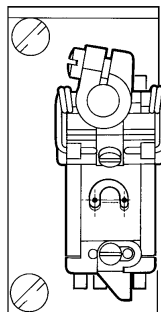

- Check to see if the presser foot is secured (raise the presser foot by the foot lifter and press it by hand front to back and left to right).

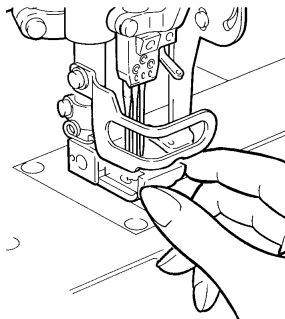

(3) Training

- To prevent accidents, operators and service/maintenance personnel should have proper knowledge and skills for safe operation.

To ensure so, managers must design and conduct training for these people.

4. Notes for each procedure

⚠ CAUTION

① Unpacking

1. The machine is packaged in a cardboard box before shipping.
Unpack your machine in orderly sequence while checking them right-side up by referring to the indications, such as logo, etc. printed on the boxes.
2. Never hold the area near the needle and/or thread guide related parts when taking out the machine from the cushion.
Otherwise it may cause injury and/or damage to the machine.
3. Take out the machine very carefully while checking the position of the center of the gravity.
4. Keep the cardboard box and packing carefully in case secondary transport is needed in the future.

Disposal of the packaging

- The packaging material of the machine consists of wood, paper, cardboard and VCE fiber. The proper disposal of the packaging is the responsibility of the customer.

Disposal of machine waste

1. The proper disposal of machine waste is the responsibility of the customer.
 2. The materials used on the machines are steel, aluminum, brass and various plastics.
 3. The machine waste is to be disposed of in accordance with the locally valid environmental protection regulations. A specialist should be commissioned if necessary.
- ※ The parts contaminated with lubricants should be disposed off separately according to the locally valid environmental protection regulations.

Transport within the customer's premises

- The manufacturer assumes no liability for transport within the customer's premises. Care should be taken to transport the machine in an upright position avoiding it from dropping or falling down to the ground when it is moved.

//////// Be sure to study very carefully for safety. //////////

WARNING

② Transportation

1. The machine should be carried by at least more than two people when it is mounted on the table and/or a hand truck.


Be sure to use a hand truck for other transportation.

2. To carry the machine, hold the machine pulley tightly with your right hand and the machine arm with your left upper arm.

If the machine and/or your hands are stained with oil, the machine may be easy to slip out of your hands and fall to the floor.

Therefore, wipe off the oil carefully.

3. Care should be taken to avoid excessive shock and shake when the machine is mounted on the table and/or transferred using a hand truck. Otherwise the machine may fall down.
4. Wipe off the oil from the machine before packaging it again for secondary transport. Otherwise the machine may easily slip out of your hands or the bottom of the box may come off while in transit.

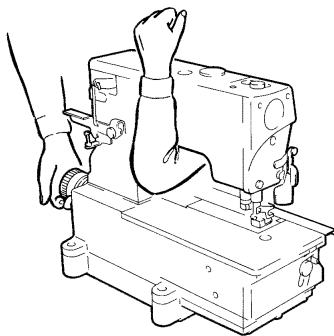

CAUTION



③ Installation, preparation

Machine table

1. Use the machine table (table board, metal legs) that completely carries the machine and is fully resistant to warping while the machine is running.
2. Arrange the working environment for easy operation by considering where to place the machine and the brightness around the working area. If the illumination is insufficient, control or change lighting as required.
3. Attach a non-slip pad to the treadle (foot switch).
Otherwise the operator may slip off the treadle while running the machine, causing trouble.
4. Adjust the height of the table according to a working posture of the operator.

WARNING

Cables

1. When connecting the cables between the machine and the motor, be sure to turn off the power and connect each cable connectors securely.
2. Do not strain the cables in use.
3.  Do not bend the cables excessively.
4. When connecting the cables that are close to the moving parts, such as pulley or V belt, keep a distance of 25mm at least between them.
5. Protect each cable using a cover or adjusting its position if necessary.
6.  Never use staples to fasten the cables.
Otherwise it causes a short circuit and/or a fire.


CAUTION

Motor

1. Install the machine motor correctly by referring to the instruction manual supplied by the manufacturer.
2. Select the machine motor equipped with the pulley cover so that any part of your body etc. is not caught in the belt.

CAUTION


Ground

1. Connect each of the ground wires in the sewing machine system to the ground terminal. Do not connect to another devices'.
2.  Connect the ground wires securely to the indicated ground points on the machine head.

WARNING

④ Handling machine oil


1. Never start the machine with no oil in the reservoir.
Use HIGHSPEED SEWING MACHINE OIL specified by Pegasus (Equivalent of ISO requirements: Viscosity Index of VG22).
 2. If machine oil gets in your eyes, it may cause eye irritation.
To prevent the machine oil from getting in your eyes, wear a pair of protective glasses.
- ※ Should machine oil gets in your eyes, wash them with fresh water for 15 minutes and then go to see a doctor.

-
3. Avoid skin contact. Immediately wash contacted areas completely with water and soap.
 4.  Never swallow machine oil.
 5. Keep machine oil out of the reach of children.
※ If swallowed, do not induce vomiting.
Immediately go to see a doctor.
 6. Dispose of the waste oil and/or containers properly as demanded by law. If you have further questions on its disposal, consult the store or shop at which you purchased it.
 7. After opening the oil container, be sure to seal it to prevent dust and water from getting into the oil and keep it in the dark to avoid direct sunlight.

WARNING



⑤ Before starting the machine

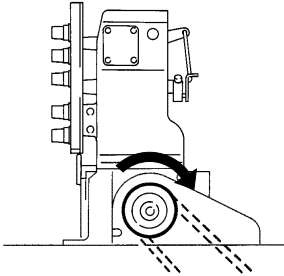


Machine table

1. Before turning the power on, visually check the cables and connectors for defective conditions, such as damage, disconnection and/or loosening.
 2. Never bring your hands close to the needle and/or pulley when turning on the power.
 3. When the machine is used for the first time, turn on the power and then check the rotating direction of the machine pulley.
The machine pulley should turn clockwise as seen from the machine pulley.
- 
4. Well trained operators should use the machine after studying these precautions and the instruction manual carefully.
 5. Regarding symbols that indicate a danger or a warning, read and study "2. Warning indications" carefully and give training on safety to the operators as required.
 6. Run the machine at the speed less than 3/4 of its maximum for the first one month.

WARNING



⑥ Precautions while you are running the machine

1.  Do not run the machine with the safety devices removed, such as eye guard, finger guard, pulley cover, etc.
2.  Never bring your hands under the needle while running the machine.

3. A clutch motor keeps on running for a while after the power is turned off. Therefore, be careful even after the power is turned off as the machine could start running by pressing the machine treadle.
4.  To prevent accidents, never bring any part of your fingers, hair and clothes near the machine pulley, V belt, motor pulley, thread take-up and needle bar. Also never leave scissors, tweezers, tools, etc. around these areas.
5.  If you use the machine with the FT device, do not bring any part of your hands and fingers too close to the FT during sewing. Otherwise it may cause accidents and physical injury.
6. Always turn off the power while the machine is not used or before leaving the machine table.
7. In the event of a power failure, be sure to turn off the power.
8. While operating the machine, wear clothes that cannot be caught in the machine.
9.  Do not put any tools or other unnecessary objects on the machine table while running the machine.


CAUTION

⑦ Maintenance, Check, Repair

1. Well trained people should perform maintenance, check and repair of the machine after studying these precautions and the instruction manual carefully.
2.  If it is necessary to lay the machine backward for maintenance, check and repair, always turn off the power, unplug the machine and press the treadle to make sure that the machine does not operate before beginning any of the procedures.
3.  Before installing/removing the V belt, always turn off the power, unplug the machine and press the treadle to make sure the machine does not operate.
4. Carry out daily maintenance work and periodical inspections properly by following these precautions and the instruction manual.
5. Employ Pegasus' genuine parts when repairing the machine and/or replacing the parts. We are not responsible for accidents caused by any improper repair/adjustment and substituting other parts for those manufactured by Pegasus.
6. Do not attempt to modify the machine at your own discretion.
We are not responsible for accidents caused by the modification.
7. Be sure to replace the safety devices and/or safety covers that are temporarily removed for maintenance and/or adjustment.
8. After performing maintenance, check and repair, make sure that turning on the power does not pose any danger to you.

//////// Be sure to study very carefully **for safety.** //////////

5.Location of warning labels and safety devices

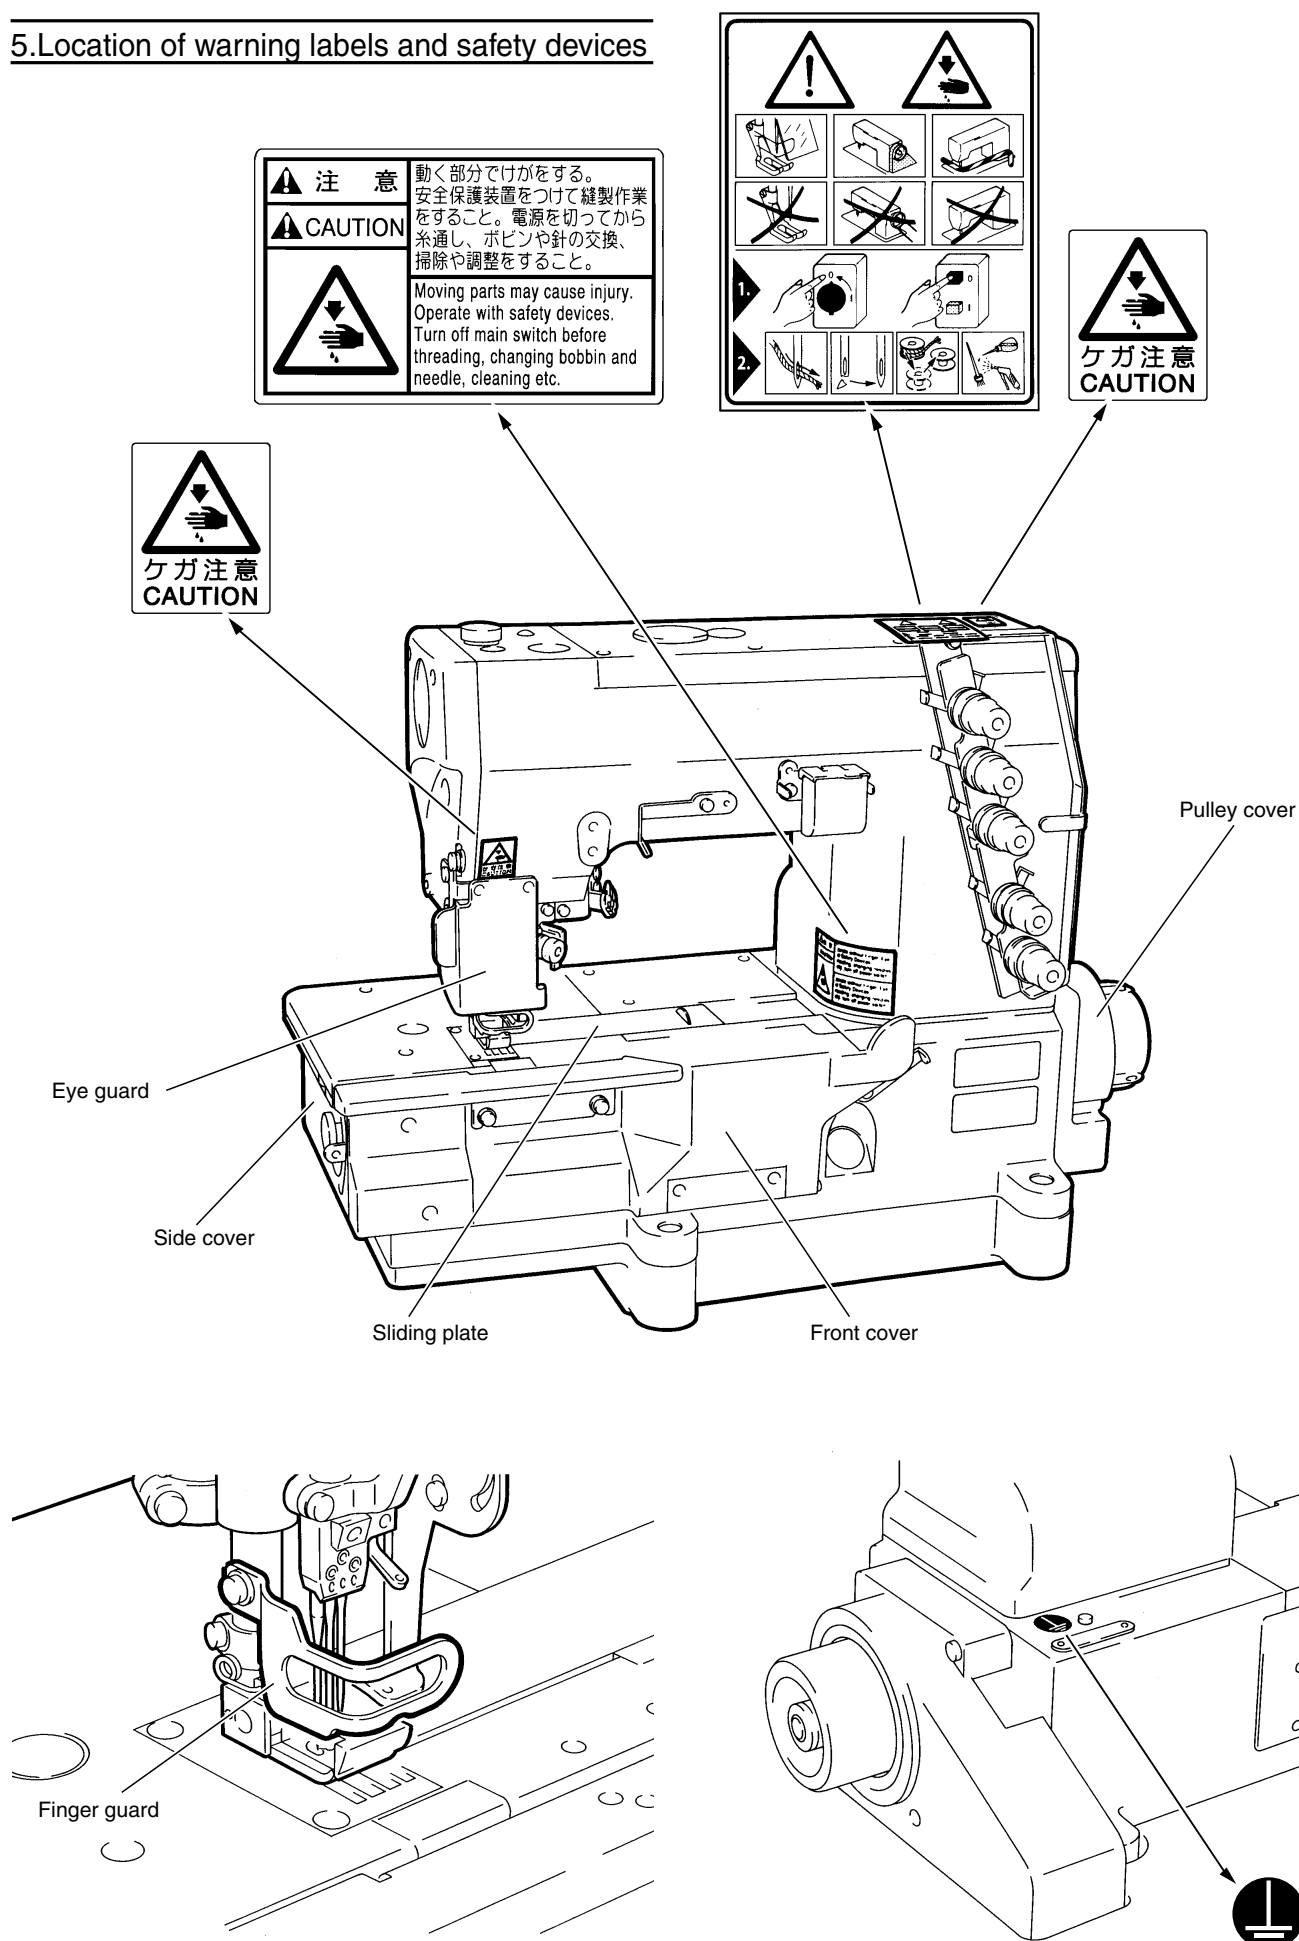

6. Protectors for safety

This chapter describes each protector for safety. Therefore, read and study the following carefully.



Protectors for safety

(1) Eye guard



Never leave the eye guard open.

For the safety of eyes, do not operate the machine with the eye guard open. The eye guard will prevent any pieces of the broken needle from getting into your eyes if the needle should break during sewing.

(2) Finger guard



Never insert any of your fingers.

To prevent the needle that moves up and down from contacting any of your body, the finger guard is installed close to the needle. However, there is clearance above the finger guard for easy threading. Be careful that the needle may penetrate any of your fingers if you insert it into this clearance.

(3) Pulley cover



Never remove.

The machine pulley and V belt are covered with the pulley cover. The machine pulley and the V belt rotate at high speed during sewing. To prevent accidents, operate the machine with the pulley cover installed in place.

(4) Pulley

Check the direction in which the machine pulley rotates. It should rotate clockwise as seen from the pulley.

(5) Presser foot



Never insert any of your fingers.

There is a clearance of more than 5mm between the top surface of the needle plate and the presser foot. Be careful that none of your fingers are caught in this clearance. Never insert any of your fingers under the presser foot when raising the presser foot with the knee switch or automatically raising it with the treadle.

(6) Front cover



Never leave the front cover open.

The looper travels left to right while drawing an arc as seen from the front of the machine. To prevent the looper from contacting any part of your body, be sure to operate the machine with the front cover closed securely.

(7) Side cover



Never leave the side cover open.

The looper travels left to right while drawing an arc as seen from the front of the machine. To prevent the looper from contacting any of your body, be sure to operate the machine with the side cover closed securely.

(8) Sliding plate




Never leave the sliding plate open.

The looper thread take-up rotates in order to supply the required amount of looper thread during sewing. To prevent the looper thread take-up from contacting any of your body, be sure to operate the machine with the sliding plate closed securely.


Assembling the machine rest board

Assemble the components comprising the machine rest board by referring to the illustration below. Be sure to secure all rods, nuts and bolts firmly with no shake.

(Non-submerged installation)

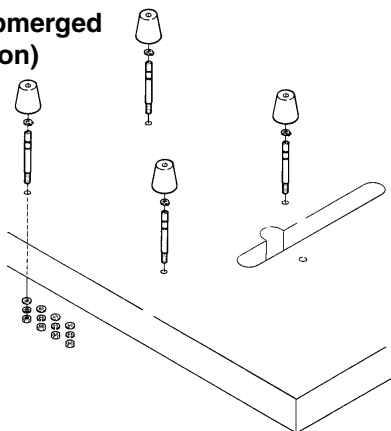

(Semi-submerged installation)

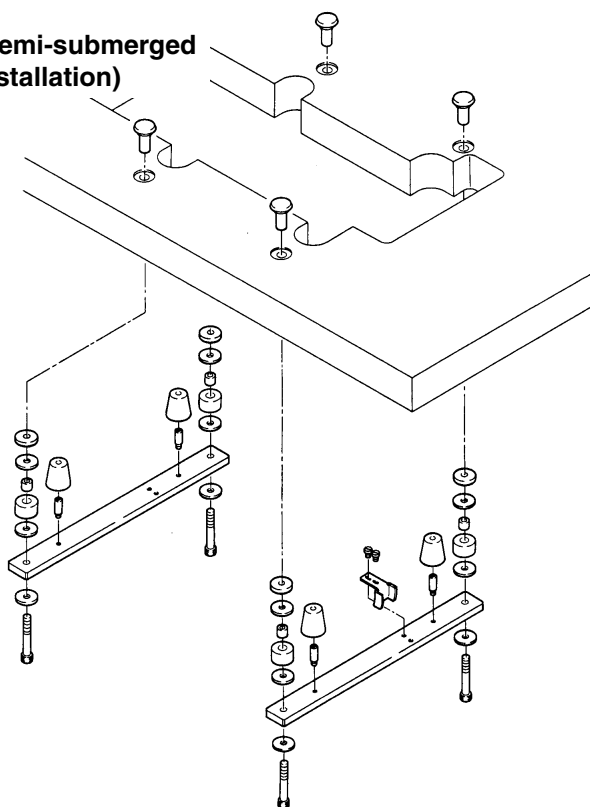

Sewing machine installation

CAUTION



Always turn off the power, unplug the machine and then well-qualified technicians should install the machine.

Mount the machine on the machine rest board first. Put the V belt in place. Position the machine motor so that an approx. 2cm deflection can be obtained by pressing the center of the belt (see the illustration).

Installing the belt cover

CAUTION





Always turn off the power, unplug the machine and then well-qualified technicians should install the belt cover.

Install belt cover **1** on the machine with screws **2**.
For non-submerged installation, install belt guard **3** onto the machine table with wood screws **4**.


Operating direction of the machine pulley

The machine pulley rotates clockwise as seen from the end of the machine pulley.

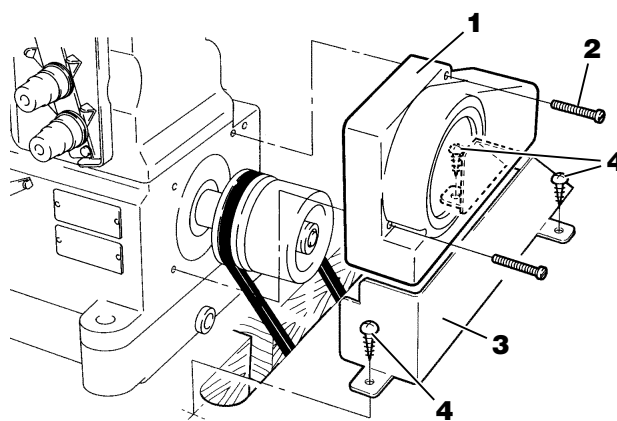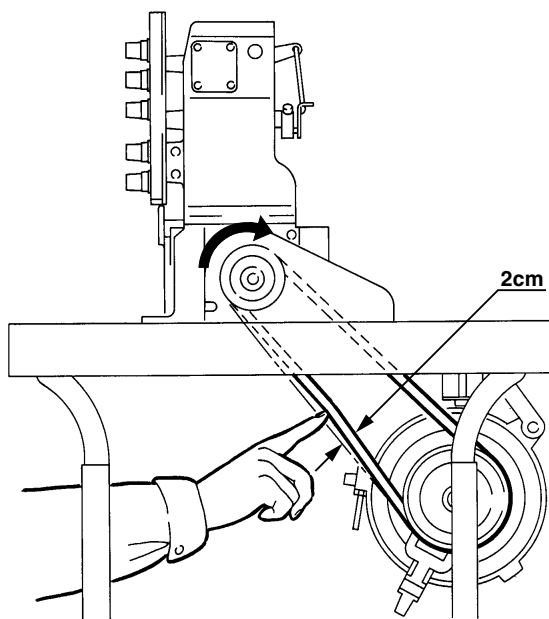

Lubrication

CAUTION

 When lubricating the machine and/or replacing the oil, use Pegasus recommended oil. Using other oils may damage the machine.

1. Oil

Use the oil "HIGH SPEED SEWING MACHINE OIL" specified by Pegasus (ISO Viscosity Grade 22).

2. To fill the machine with oil

Remove cap **1**.

Add the oil until the oil level (see oil gauge **2**) reaches (H).

After filling the tank with oil, replace cap **1**.

3. Required amount of oil


(H) on oil gauge **2**: Upper limit

(L) on oil gauge **2**: Lower limit

The oil level should always lie between (H) and (L).

4. Manual lubrication




CAUTION

 Always turn off the power and unplug the machine when you apply oil by hand.

Apply two or three drops of oil to needle bar **3** by hand when the machine is used for the first time or left unused for some time.


5. Checking oil circulation

Once the machine has been properly filled with oil, press the machine treadle to run the machine and check oil gauge window **4** to see if the oil is flowing.

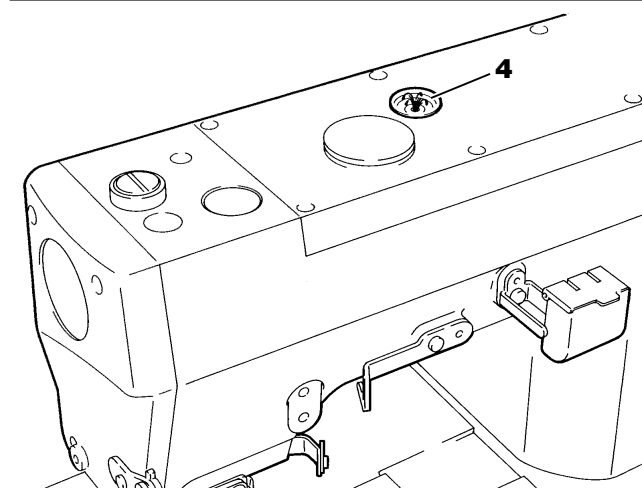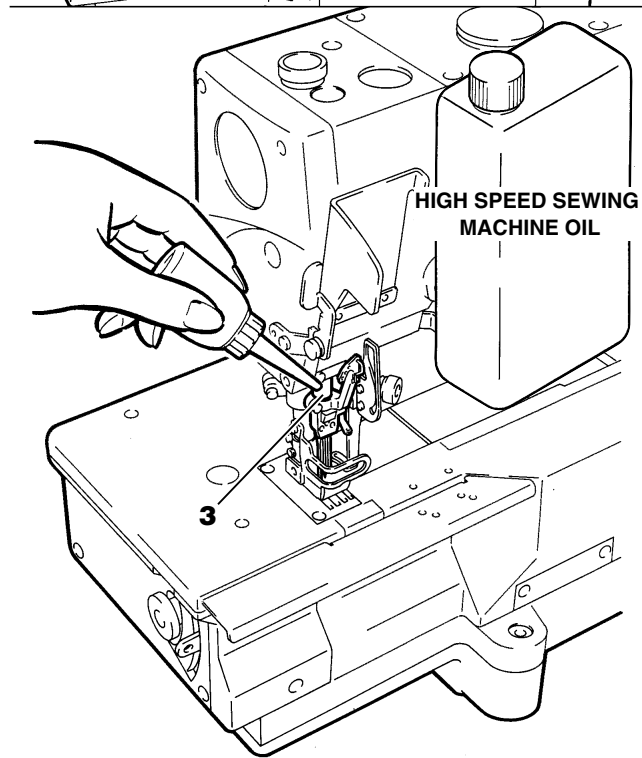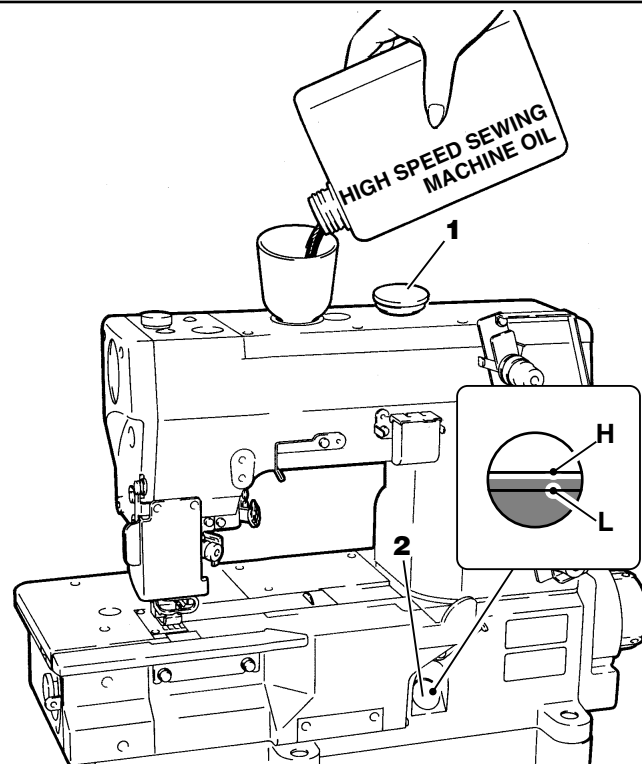


Silicone oil for H.R. device

CAUTION

 Always turn off the power and unplug the machine when you fill the HR device with silicone oil.


Fill silicone oil tanks **1**, **2** with silicone oil.

To prevent thread breakage or fabric damage, add the silicone oil before it is too low.

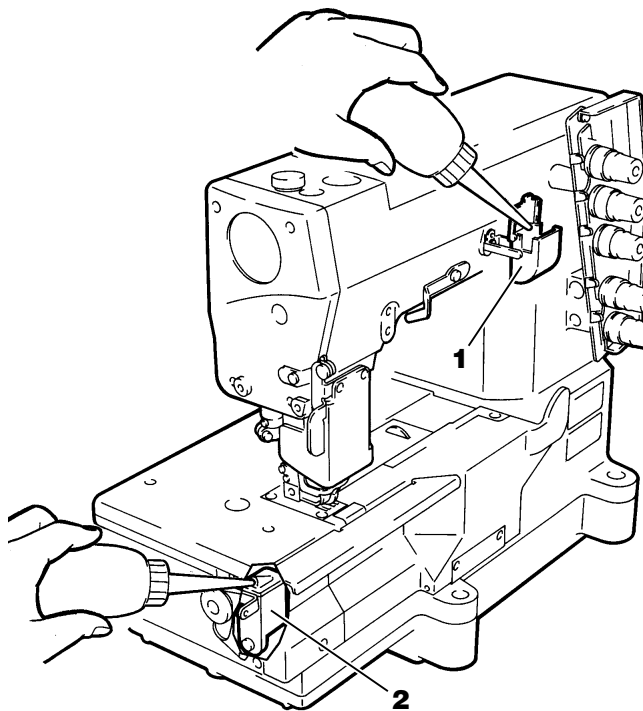


Threading



⚠ CAUTION

 Always turn off the power and unplug the machine when you thread the machine.

1. Open eye guard 1 and covers 2, 3 and 4.

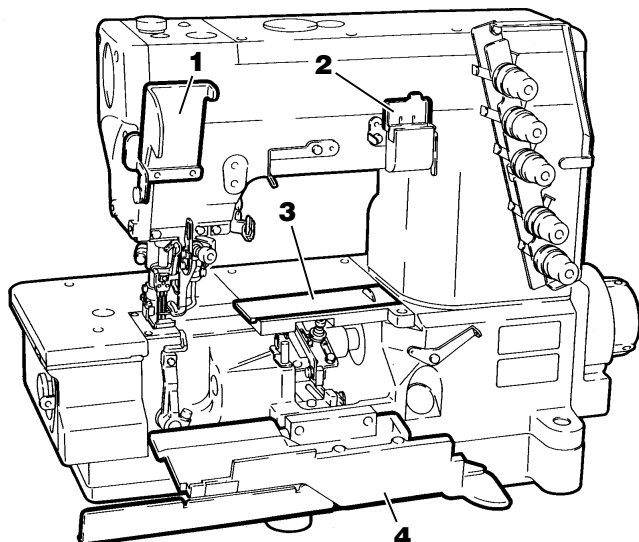

2. Press lever 5 and bracket 6 comes out toward you. After threading, press bracket 6 into place.

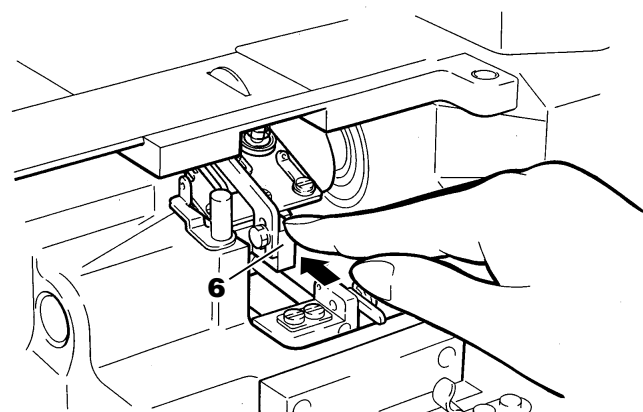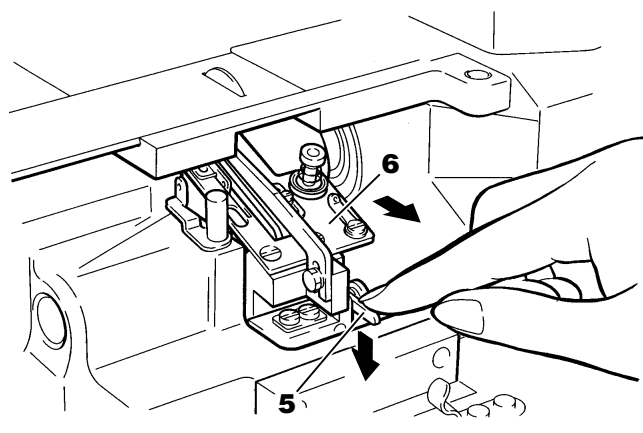

3. In case the machine is threaded previously

Be sure to thread the machine correctly by referring to the threading diagram. (See page 13)


A : Knot the preset thread and the thread being used together to thread the machine.

B : Needle thread


Trim the knots off neatly before passing through the eye of the needle to thread.

**c : Looper thread,
Top cover thread**

Trim the knots off neatly after passing through the eye of the looper.

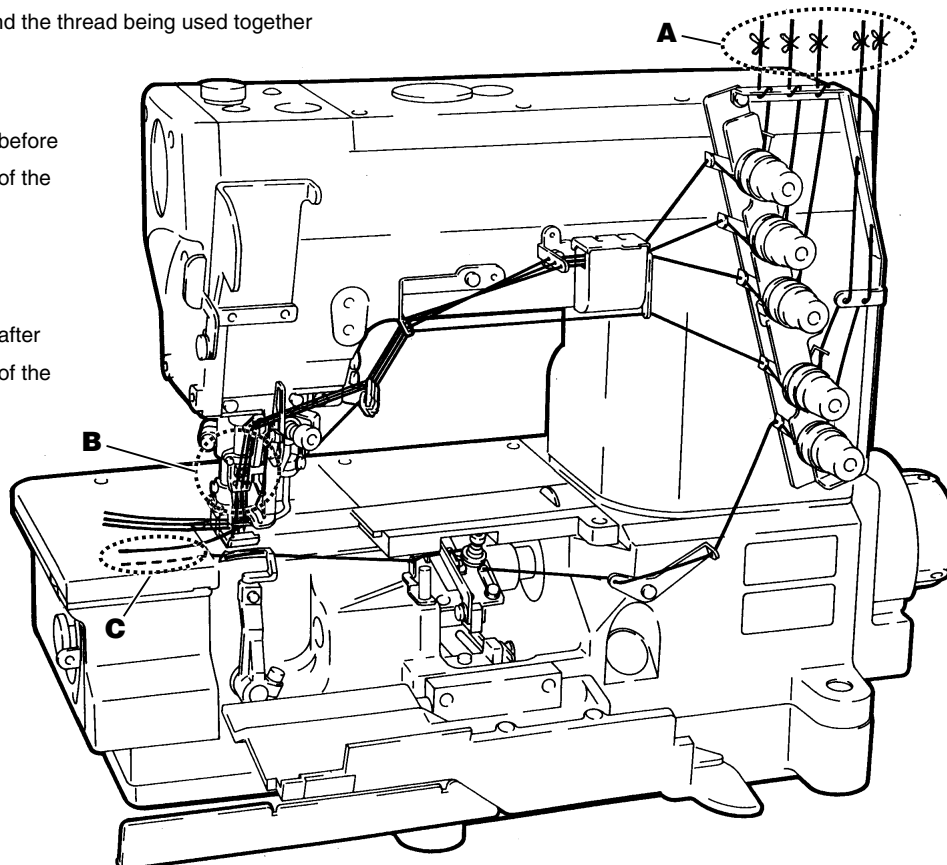


4. Threading diagram

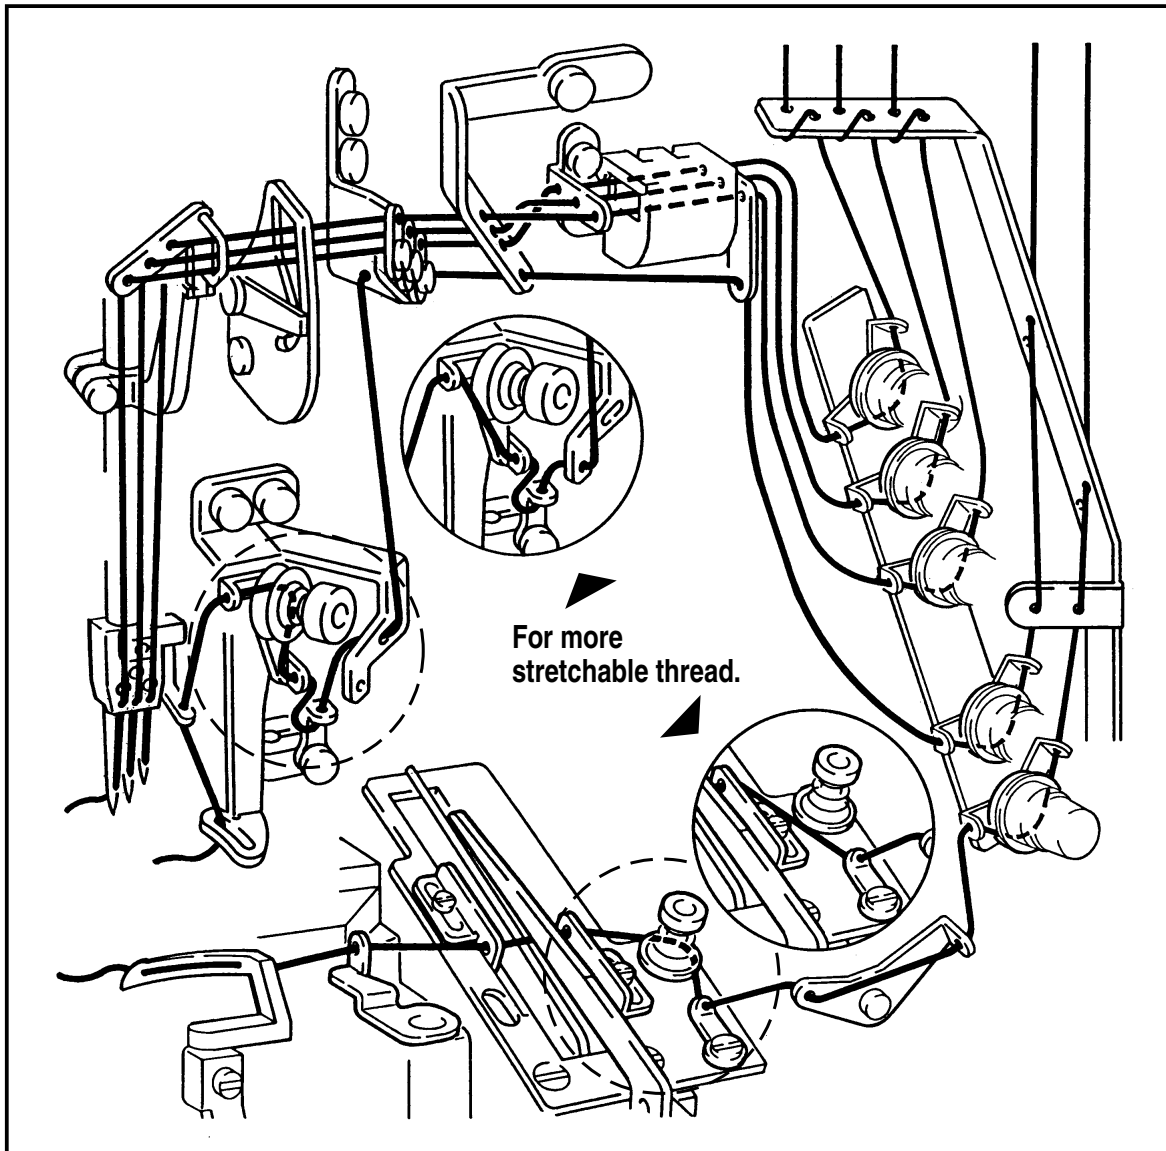

Adjusting presser foot pressure

The presser foot pressure should be as light as possible, yet sufficient to feed the fabric correctly and provide the uniform stitch formation.


Loosen nut **1**. Adjust the presser foot pressure. Adjustment is made by turning screw **2** clockwise or counterclockwise using a coin. Tighten nut **1**.

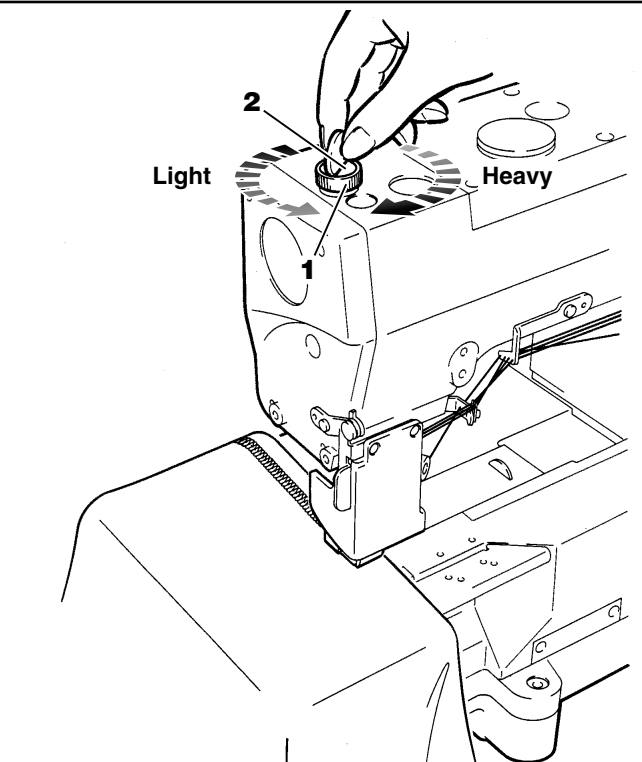

Adjusting the differential feed ratio

1. Loosen nut **3** for the differential feed ratio adjustment.
To increase the differential feed ratio, lower lever **4**.
The finished fabric is shrunk.
To decrease the differential feed ratio, raise lever **4**.
The finished fabric is stretched.

2. After this adjustment tighten nut **3**.

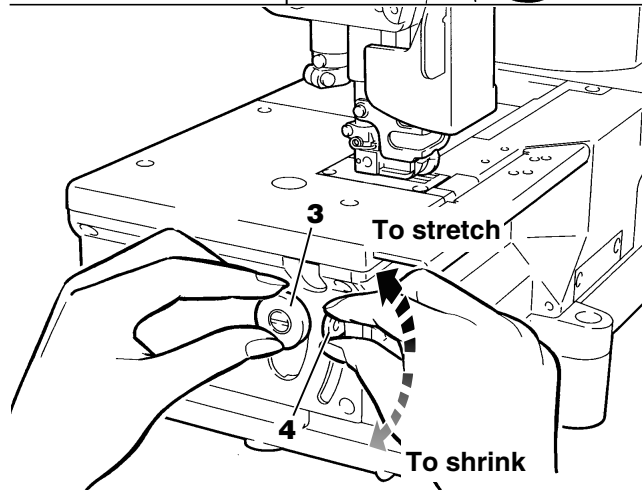

Adjusting stitch length


CAUTION

Always turn off the power and unplug the machine when adjusting the stitch length.

1. While pressing the push button **5**, turn the handwheel **6** to seek the position at which the push button **5** goes further into the depth.
2. Then, keeping the push button **5** pressed, turn the handwheel **6** and set the desired scale to the aligning mark **A**.

Note

Stitch length adjustment must only be made after the differential feed ratio has been changed.

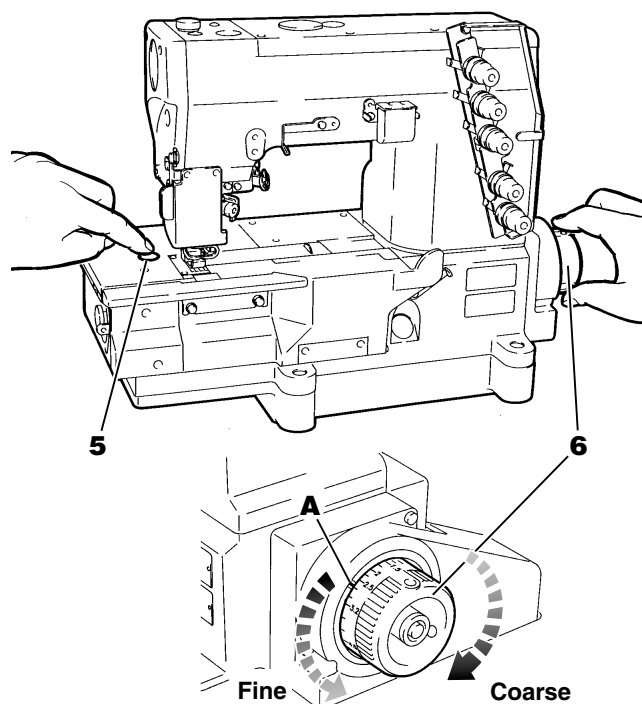


Adjusting the thread tension

To obtain the proper thread tension, adjust needle thread tension knobs **1**, top cover thread tension knobs **2** and looper thread tension knob **3**.

To tighten the thread, turn each knob clockwise.

To loosen the thread, turn each knob counterclockwise.

Each thread tension should be as light as possible, yet be sufficient to produce balanced and beautiful stitches.

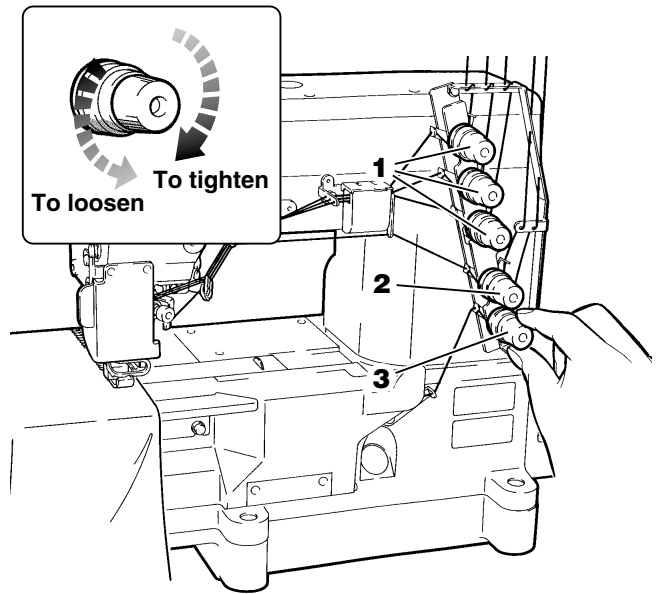


Cleaning the machine

CAUTION




Always turn off the power and unplug the machine when you clean the machine.

1. Open front cover **4** and slide plate **5**. Loosen screws **6** and remove needle plate **7**.
2. Clean the grooves of the needle plate and the area around the feed dogs.
3. Replace needle plate **7** with screws **6**. Then close front cover **4** and slide plate **5**.


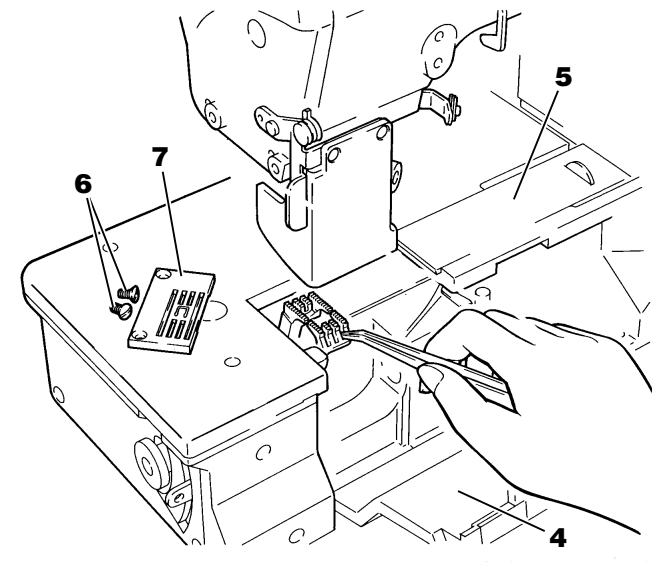


Replacing the needle

CAUTION

 Always turn off the power and unplug the machine when you replace the needle(s).

1. Loosen screw(s) **1** using a red-handled key wrench (1.5mm).
2. Remove the old needle(s) by using a pincette (provided as accessories).
3. Fix the needle so that its scarf faces the rear side of machine.
4. Insert a new needle into the needle hole as far it will go by using a pincette.
5. Tighten screw(s) **1** using a red-handled key wrench (1.5mm).

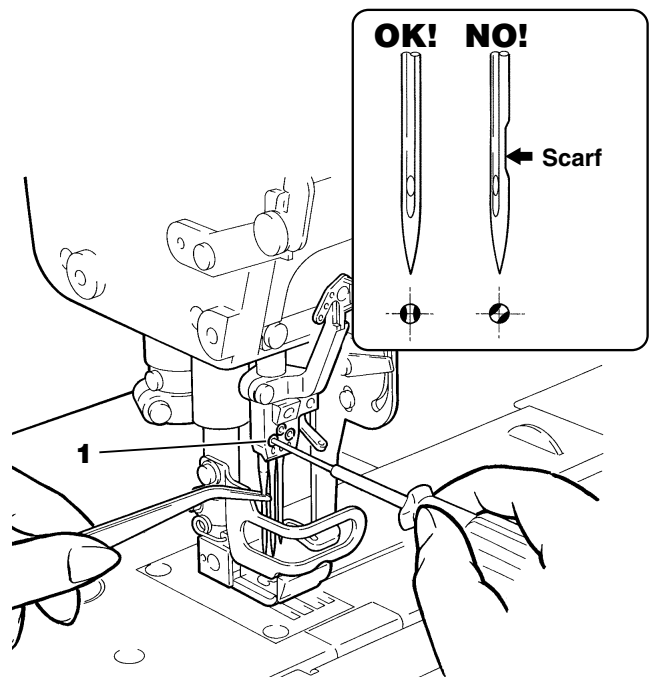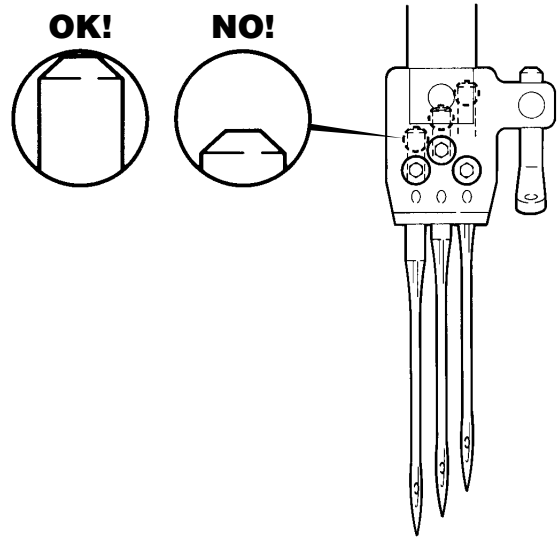


Oil replacement

Replace the oil one month after the first use and thereafter every six months. If you keep using the old oil, it may cause the damage to the machine.


To drain the oil

1. Drain the oil by removing screw **2** on the left side of the oil pan.
2. Tighten screw **2** after draining.

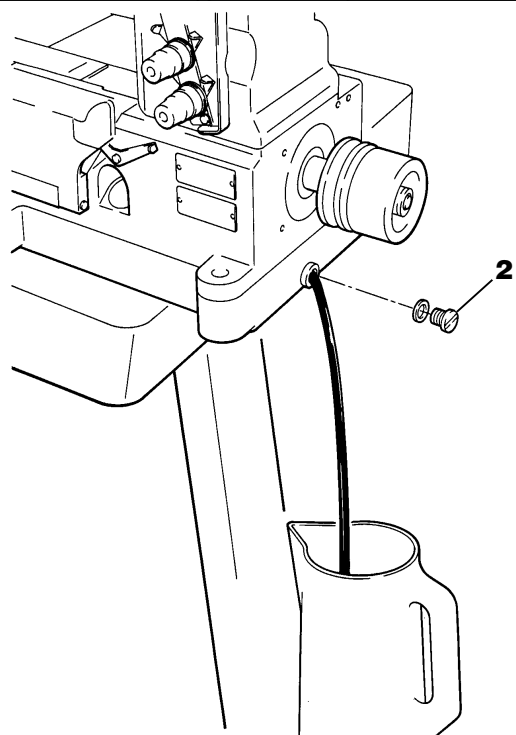

Adjusting the needle thread guard

⚠ CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the needle thread guard.




Loosen screw **2**. Adjust needle thread guard **1** to the appropriate position according to the type of thread being used (see the illustration right). Tighten screw **2** temporarily.

- To decrease the size of the needle thread loop, move needle thread guard **1** up.
- To increase the size of the needle thread loop, move needle thread guard **1** down.

Move guard **1** up and down so that the needle thread loop is formed properly.

Tighten screw **2** after this adjustment.

- (1) In the case of the threads that are not stretchable, such as cotton threads (The needle thread loop tends to be formed large and lie down.)
- (2) In the case of the stretchable threads, such as woolly threads (The needle thread loop tends to be formed small.)
- (3) In the case of the threads that are slightly stretchable, such as spun threads

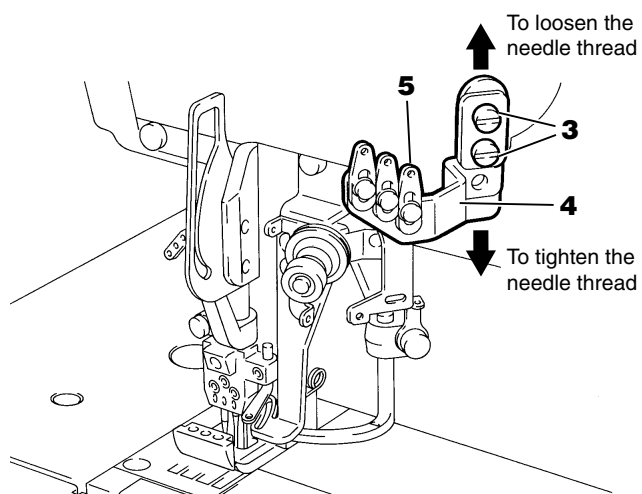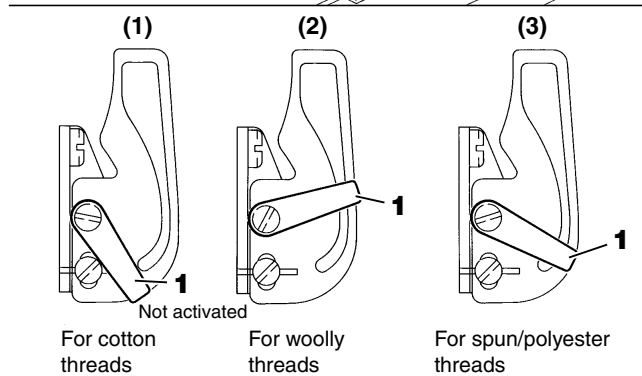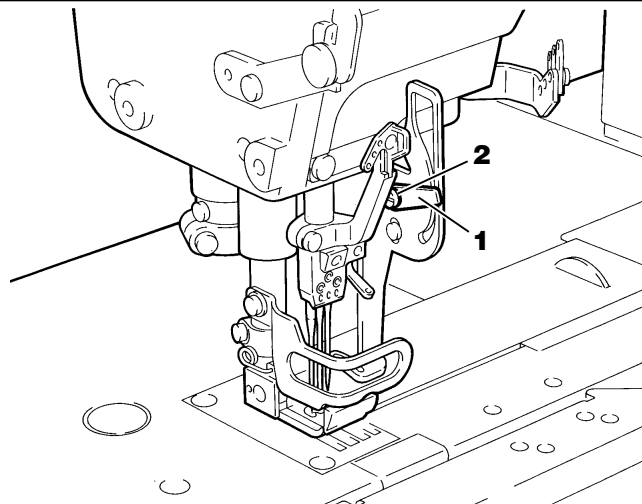


Adjusting the needle thread guides

The distance from the center of the eyelet on left needle thread guide **5** to the top surface of the needle plate should be 93mm (standard).

Adjustment is made by loosening screws **3** and moving thread guide **4** up or down (see the illustration on the right). After this adjustment tighten screws **3** temporarily.


- To loosen the needle thread, move needle thread guide **4** up.
- To tighten the needle thread, move needle thread guide **4** down.

Tighten screws **3** after this adjustment.

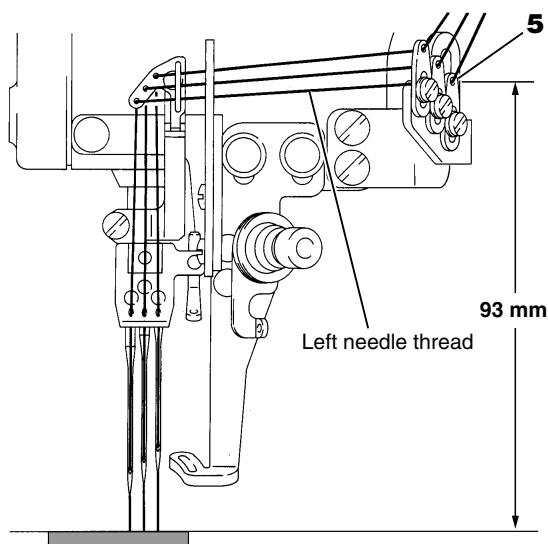

Adjusting the looper thread take-up


CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the looper thread take-up.


When the left needle has reached the point shown in the illustration while the looper is moving to the right from the extreme left end of its travel, the looper thread should be released from point **A** on the looper thread take-up.

To make this adjustment, loosen screws **2** and turn looper thread take-up **1** as required.

After the above adjustment, tighten screw **2**.

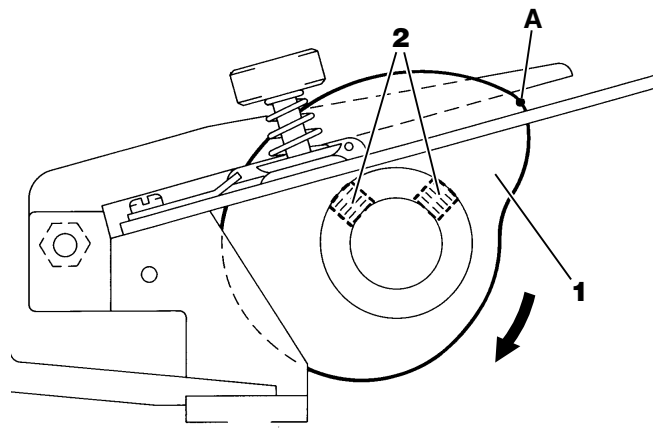


Position of the point of the left needle when the looper thread is released from point A on looper thread take-up 1.

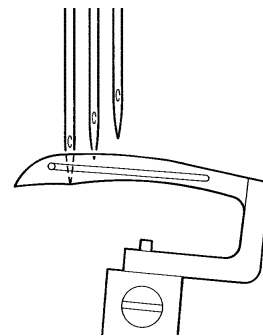

The point of the left needle has reached the bottom end of the looper blade.

Adjusting the looper thread guides



CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the looper thread guides.

Loosen screws **2** and **3**. Center screws **2** and **3** in the slots on looper thread guides **4** and **5** respectively (standard) by adjusting looper thread guides **4** and **5** (see the illustration on the right). After this adjustment tighten screws **2** and **3** temporarily.


- To increase the supply of looper thread, move looper thread guides **4** and **5** in the direction of **A**.
- To decrease the supply of looper thread, move looper thread guides **4** and **5** in the direction of **B**.

After this adjustment is made, tighten screws **2** and **3**.

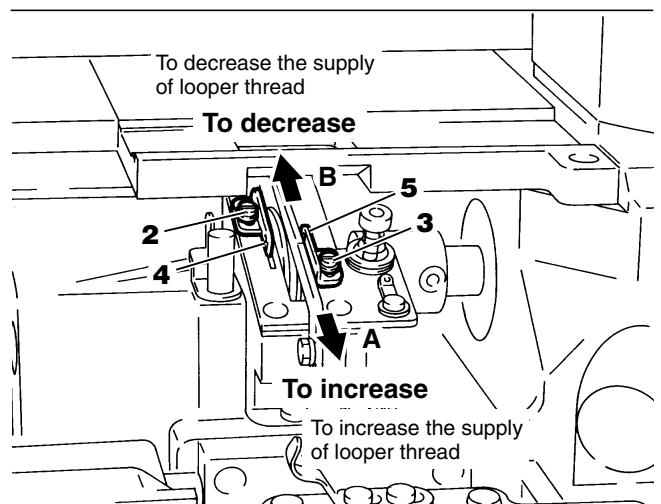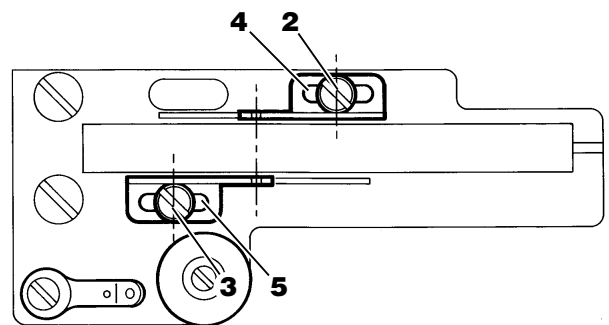

Adjusting the spreader

CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the spreader.

1. To adjust the spreader

(1) To adjust the spreader height :

Adjust distance **A** from the top surface of the needle plate to the bottom surface of spreader **1**. Select the distance according to the machine being used by referring to the table of adjustment dimensions (see page 32). Adjustment is made by loosening screw **2** and moving spreader **1** up or down.

After the above adjustment is made, tighten screw **2** temporarily.

To adjust the spreader front to back :

When point **B** on the spreader has come close to the left needle while spreader **1** is moving to the left from the extreme right end of its travel, there should be a distance of 0.5mm from point **B** to the left needle. Adjustment is made by moving spreader **1** front to back.

After this adjustment is made, tighten screw **2**.

(2) Left-to-right adjustment

When spreader **1** is at the extreme left end of its travel, there should be a distance of 5.0mm from the center line of the left needle to point **B** on the spreader. Adjustment is made by loosening screw **3** and moving spreader **1** left to right.

After this adjustment is made, tighten screw **3**.

2. Adjusting the spreader thread guide

(1) When spreader **1** is at the extreme right end of its travel, there should be a clearance of 0.5mm between the bottom surface of spreader thread guide **4** and spreader **1**. Adjustment is made by loosening screws **6**. After this adjustment is made, tighten screws **6** temporarily.

(2) Align the center of the slot of spreader thread guide **4** with point **B** on the spreader. Adjustment is made by moving spreader thread guide **4** left to right. After this adjustment is made, tighten screws **6**.






3. Adjusting the thread guide

(1) When the needles are at the bottom of their stroke, position thread guide **5** just above front end **D** of the slot on thread guide **4**. Adjustment is made by loosening screw **7**.

After this adjustment is made, tighten screw **7** temporarily.


(2) There should be a clearance of 1.0mm between thread guide **5** and spreader thread guide **4**. Adjustment is made by moving thread guide **5** front to back.

After this adjustment is made, tighten screw **7**.

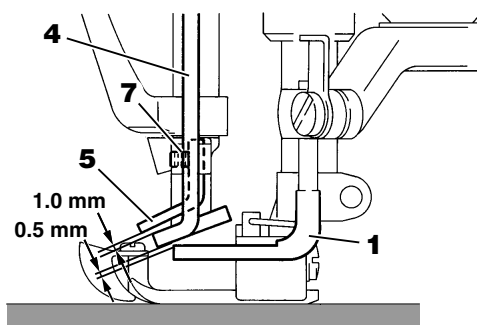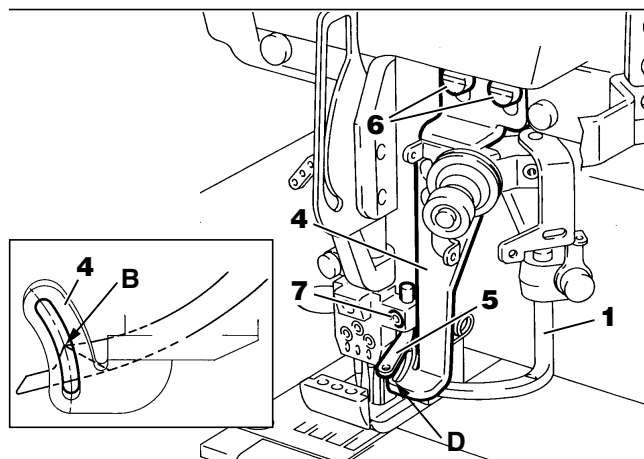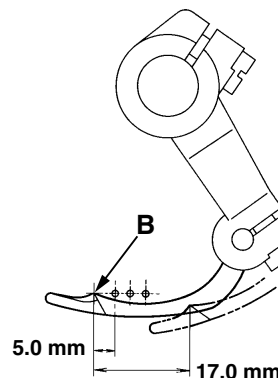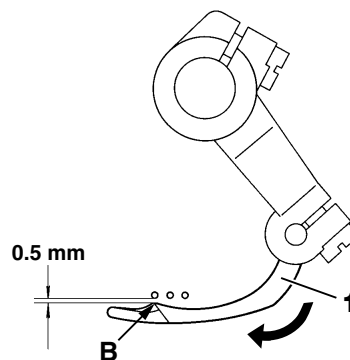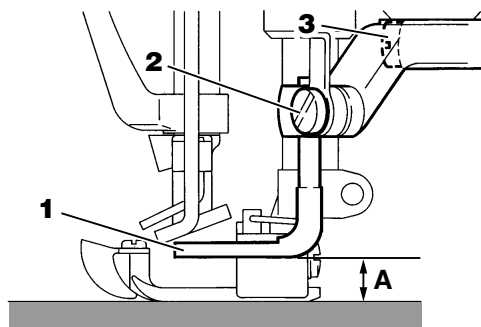

Adjusting the top cover thread guide

CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the top cover thread guide.



Loosen screw **1** so that there should be a distance of approximately 20mm (see the illustration) between the left end of spreader thread guide **2** and the left end of top cover thread guide **3** (standard position). Then, tighten screw **1** temporarily.

- To decrease the supply of top cover thread, move top cover thread guide **3** to the right.
- To increase the supply of top cover thread, move top cover thread guide **3** to the left.

Tighten screw **1** after this adjustment.


A fine adjustment can be made by knob **4**.

- To decrease the supply of top cover thread, turn knob **4** clockwise.
- To increase the supply of top cover thread, turn knob **4** counterclockwise.

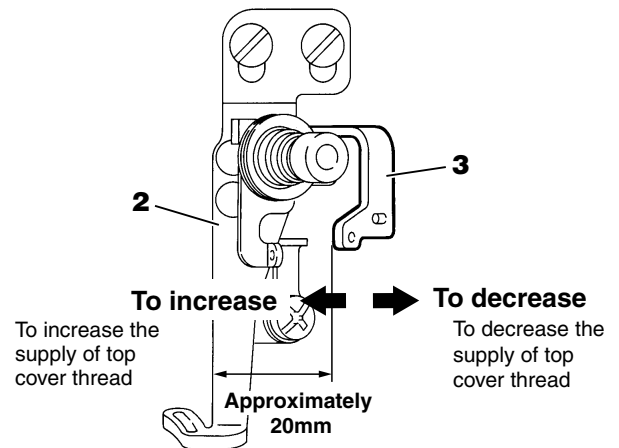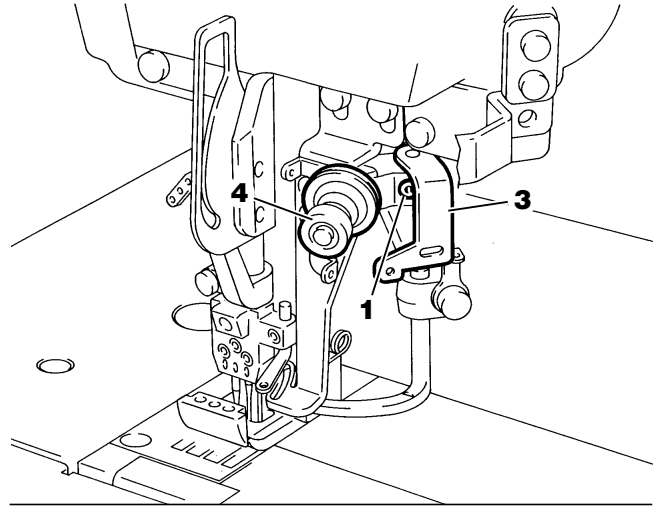


Adjusting the feed dog height

CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the feed dog height.


When the feed dogs are at their highest point of travel, there should be a distance of 0.8~1.2mm from the top surface of the needle plate to extended line **A** from the tips of main **1** and differential **2** feed dogs. Adjustment is made by loosening screws **3** and **4**, and moving feed dogs **1** and **2** up or down.

After the above adjustment, tighten screws **3** and **4**.

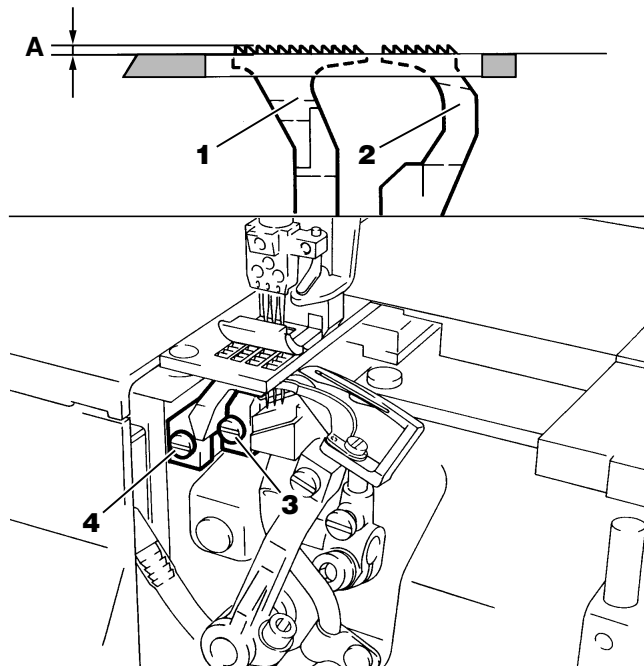


Adjusting the presser foot lift


CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the presser foot lift.

When presser foot **5** is raised, adjust distance **B** from the top surface of the needle plate to the bottom surface of the presser foot. Select the distance according to the machine being used by referring to the specifications (see page 33).

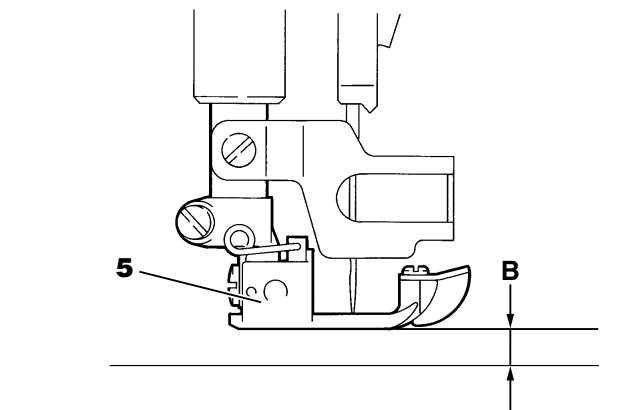

1. Turn the machine pulley until the feed dogs are at their lowest point of travel.
2. Adjust the presser foot lift by lowering lever **8**.
Note that the presser foot should not be in contact with the spreader.
3. Loosen nut **6**. Adjust screw **7** so that it contacts lever **8**.
Then tighten nut **6**.

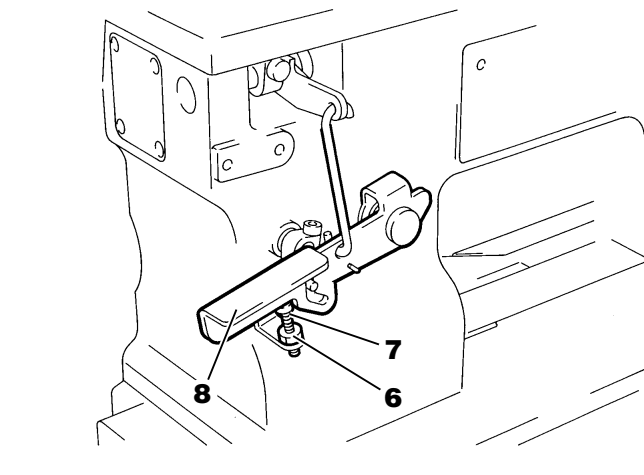

Adjusting the needle height

CAUTION



Always turn off the power, unplug the machine and then well-qualified technicians should adjust the needle height.




Adjust distance **a** from the point of the left needle to the top surface of the needle plate when the needle is at the top of its stroke.

The distance varies according to the machine being used.

Refer to the table of adjustment dimensions (see page 32).


1. Turn handwheel **1** and align mark **A** on the machine with mark **P** on the handwheel to bring the needle bar to the top of its stroke.
2. Loosen screw **2**. Adjust the needle height by moving needle holder **3** up or down.

● Adjust the relationship between each needle and needle drop hole so that clearance **b** is equal after the needle height adjustment (see the illustration). Then tighten screw **2**.

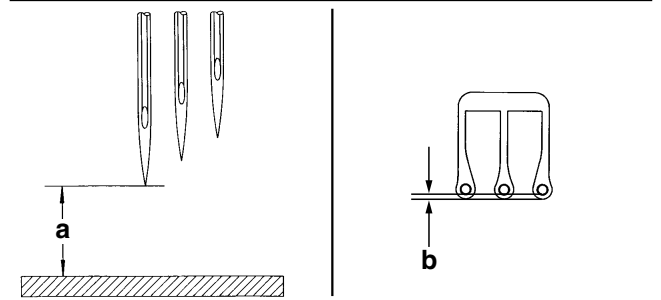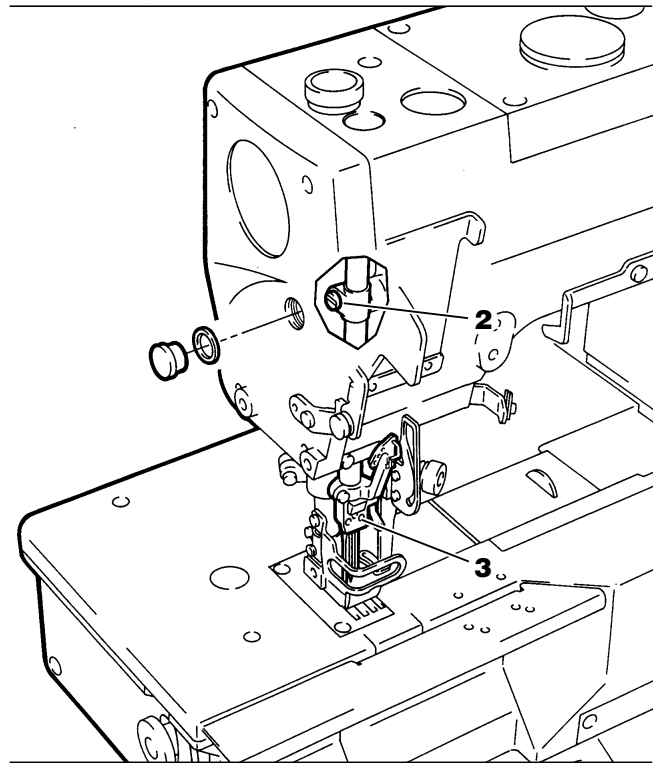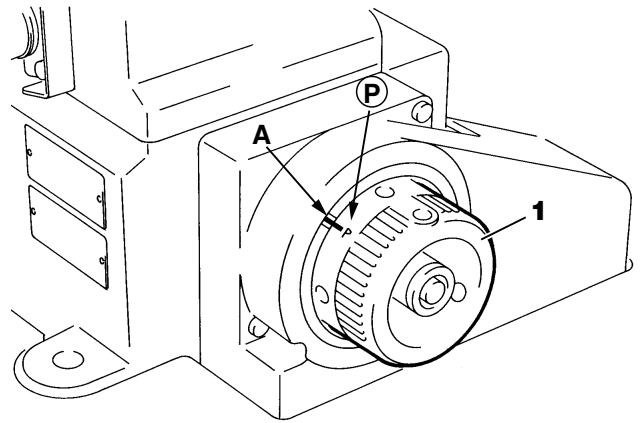

Adjusting the looper

CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the looper.

1. Adjusting the looper-needle setting distance

Adjust looper-needle setting distance **A** from the center of the right needle to the point of looper **1** when the looper is at its farthest position to the right. Select the distance according to the machine being used by referring to the table of adjustment dimensions (see page 32).

Adjustment is made by loosening screw **3** on looper holder **2** and moving looper holder **2** to the left or right. After the adjustment, tighten screw **3**.

2. Adjusting the looper avoiding distance




When the point of the looper has reached the center of the left needle from the extreme right end of its travel, there should be 0.05~0.1mm front-to-back clearance between the left needle and the point of the looper.

● For 3-needle machines

When the point of the looper has reached the center of the middle needle from the extreme right end of its travel, there should be 0-0.05mm front-to-back clearance between the middle needle and the point of the looper.


Adjustment is made by loosening screw **3** on looper holder **2** and moving looper holder **2** forward or backward. After the adjustment, tighten screw **3**.

● When the point of the looper is passing the center of the right needle from the extreme right end of its travel (the rear needle guard is not effective), the right needle slightly contacts the point of the looper.

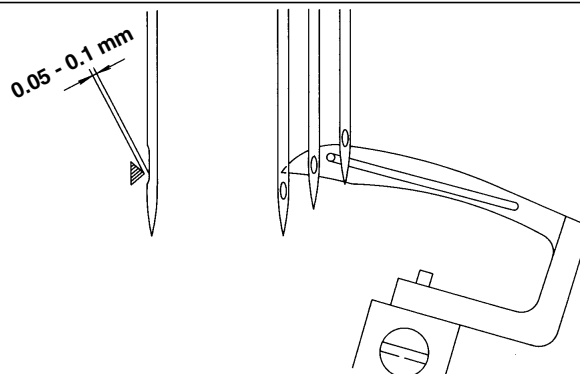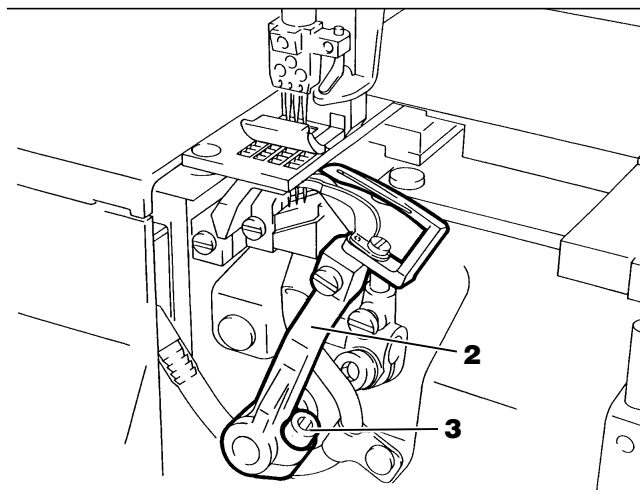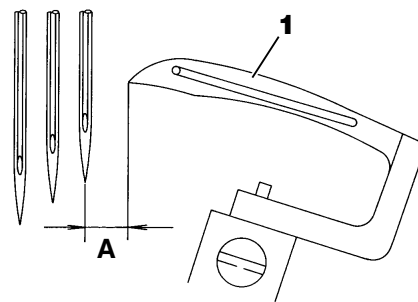


Adjusting the needle guard (rear)


CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the needle guard (rear).


1. Line **A** on needle guard (rear) **1** should be positioned 1/3 below the top end of the right needle's eye when the needle is at the bottom of its stroke. To make this adjustment, loosen screw **2**, move needle guard (rear) **1** up or down. After this adjustment, tighten screw **2**.

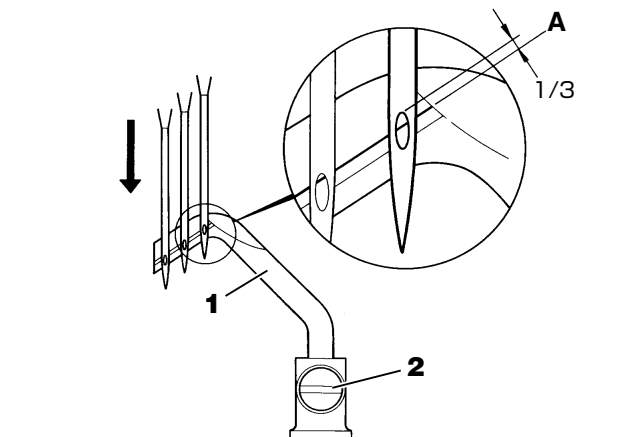

2. When the point of the looper has reached the center of the right needle from the extreme right end of its travel, there should be 0~0.05mm front-to-back clearance between the right needle and the point of the looper. Adjustment is made by loosening screw **3** and moving needle guard (rear) **1** forward and backward. After adjusting, tighten screw **3**.

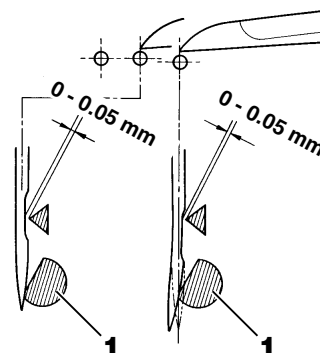


3. For 3-needle machines :
When the point of the looper has reached the center of the middle needle, the middle needle must slightly contact needle guard (rear) **1** with 0~0.05mm front-to-back clearance between the middle needle and the point of the looper. Adjustment is made by loosening screw **2** and swing needle guard (rear) **1** to the left or right. After adjusting, tighten screw **2**.


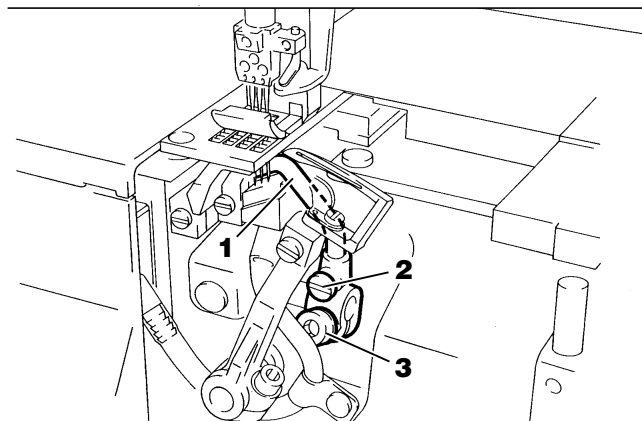


Adjusting the needle guard (front)

CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the needle guard (front).

There should be a clearance of 0.3~0.5mm (See **B**) between the needles and needle guard (front) **5** when looper **4** is moving to the left in the back side of the needles. To make this adjustment, loosen screw **6** and move needle guard (front) **5** backwards or forwards. Finally, tighten screw **6**.

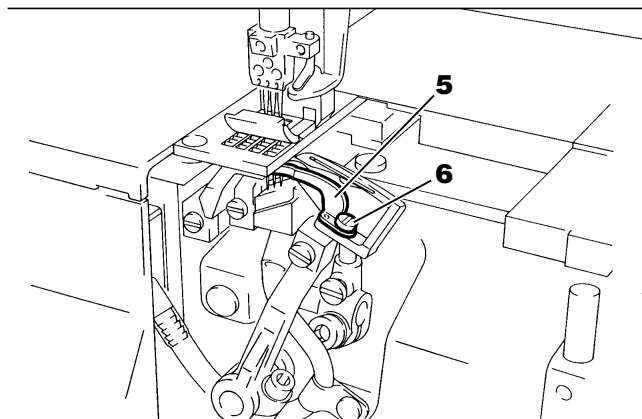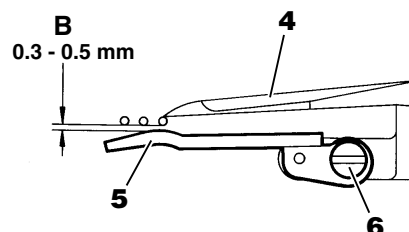

Changing the maximum differential feed ratio

The differential feed ratio is set to 1:0.9~1:1.3 at the factory.



Always turn off the power, unplug the machine and then well-qualified technicians should adjust the differential feed ratio.




In the case of a differential feed ratio of 1:1.3~1:1.8

CAUTION




If you use the machine with a differential feed ratio of 1:1.3~1:1.8, the feed dogs may strike the needle plate and be damaged. Check to make sure the movement amount of the feed dogs is less than 3.2mm.

1. Set the stitch length (main feed dog movement) at less than 3.2mm.
2. Remove screw 1, nut 2 and spring washer 3.
3. Remove side cover 5 by removing screws 4.
4. Loosen screw 7. Move stopper 6 down all the way to the bottom. Tighten screw 7.
5. Replace side cover 5 with screws 4, and attach nut 2 and spring washer 3 onto adjusting lever 8 with screw 1.

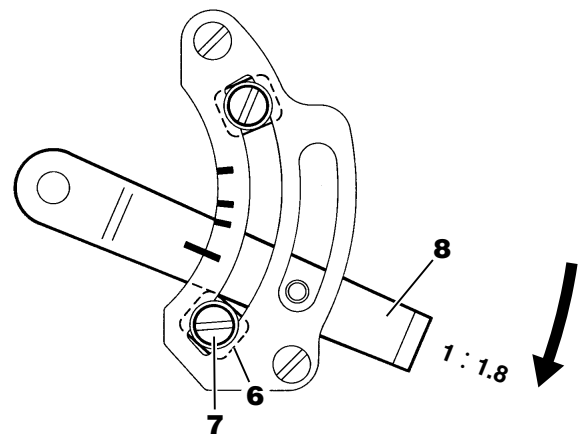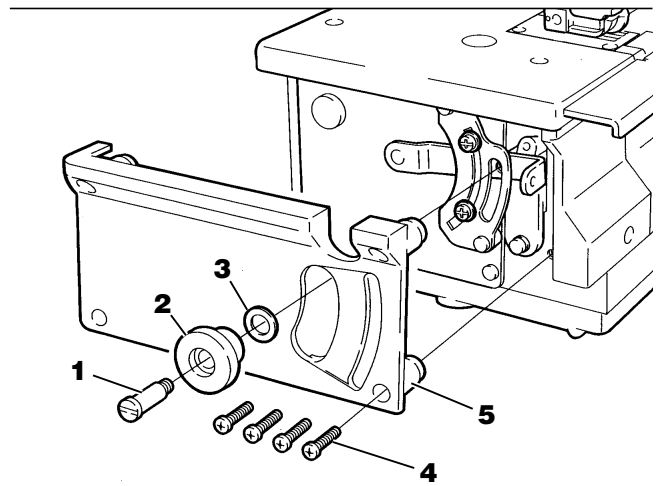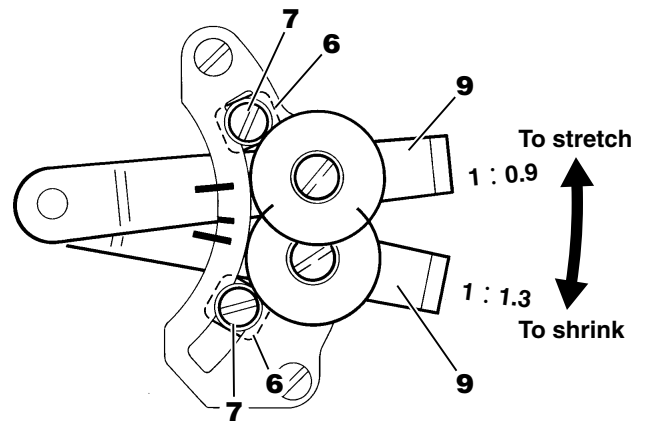


Checking and cleaning the oil filter

CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should check and clean the oil filter.


Check and clean the oil filter every six months.
To check and clean the oil filter

1. Remove screws **1** and **2**. Remove oil reservoir **3**.
2. Loosen screw **4**. Remove inner and outer filters **5** and **6**.
Then check and/or clean these filters.
3. Reinstall oil reservoir **3**, filters **5** (inner) and **6** (outer).

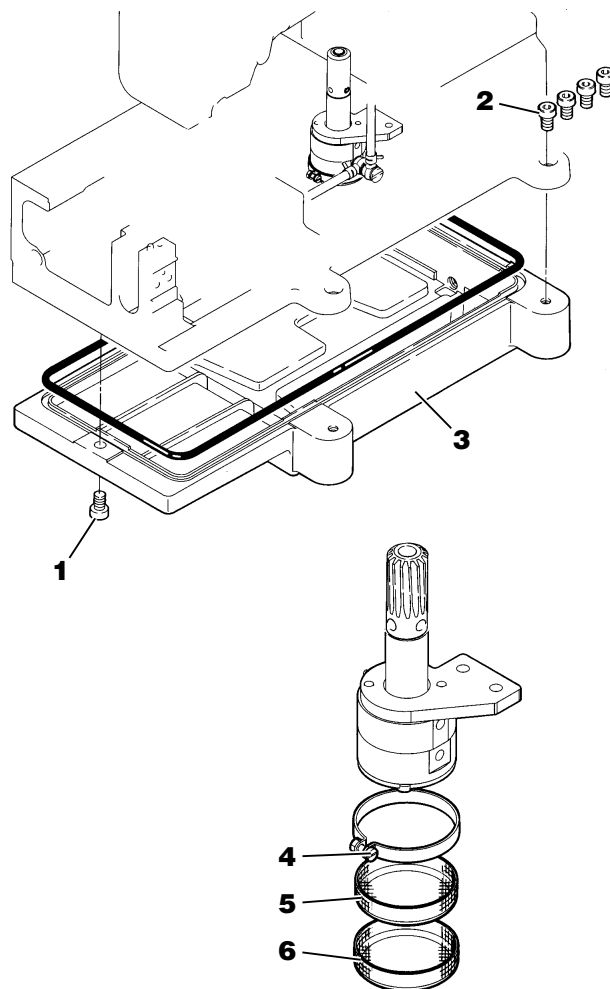


Adjusting the amount of backward tilt on the presser foot (for W1562-05)

⚠ CAUTION

 Always turn off the power, unplug the machine and then well-qualified technicians should adjust the amount of backward tilt on the presser foot.

For W1562-05 Adjust the amount of backward tilt on presser foot **1** according to the elastic lace and fabric to be used. Adjustment is made by loosening nut **2** and turning screw **3** as required.


- To increase the amount of backward tilt, turn screw **3** clockwise.
- To decrease the amount of backward tilt, turn screw **3** counter-clockwise.

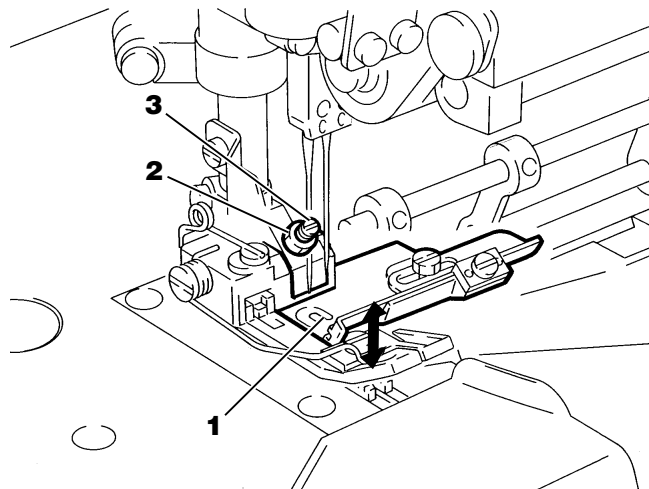


FT device (for W1562-05)

Manual lubrication

⚠ CAUTION

 Always turn off the power and unplug the machine when you apply oil by hand.


When the machine is used for the first time or left unused for some time, put oil to upper knife crank **4** until the oil wick is fully lubricated.

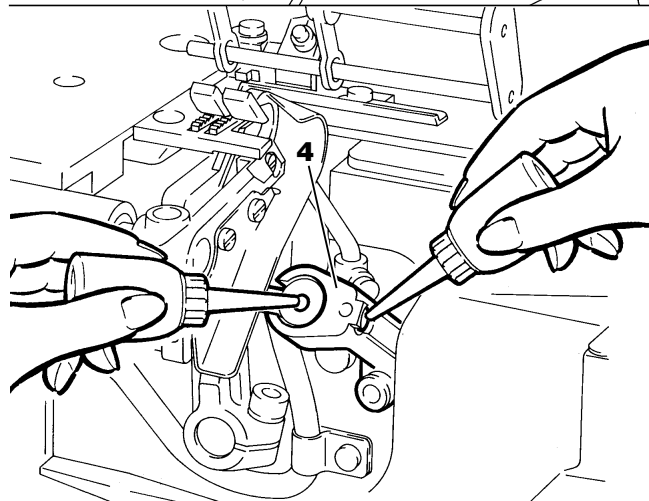

Adjusting the fabric guide


Adjust the amount of the fabric to be trimmed.


Adjustment is made by loosening screws **6** and moving fabric guide **5** to the left or right.

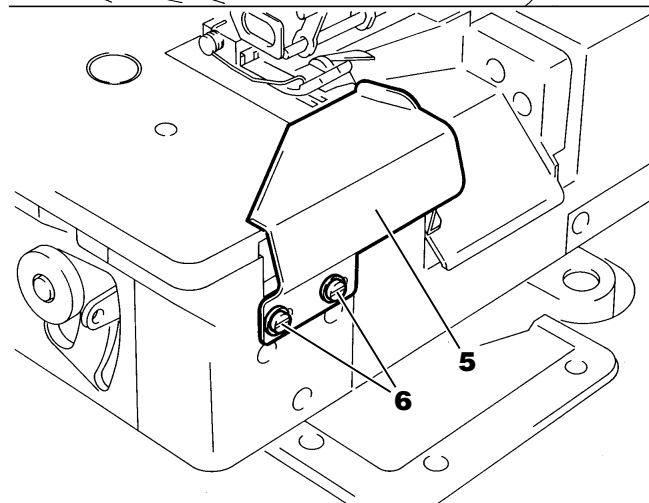



Replacing the upper knife

⚠ CAUTION

 Always turn off the power, disconnect the power cord and then only well-qualified technicians should replace and adjust the knife.

 Pay close attention to the knife edges not to injure your hands and/or finger.

1. Turn the machine pulley until upper knife **7** is at the top of its travel. Remove screw **8**. Then replace the upper knife with the new one.
2. To replace the upper knife, press end **a** of the upper knife to upper knife holder **9**, and then tighten screw **8**.

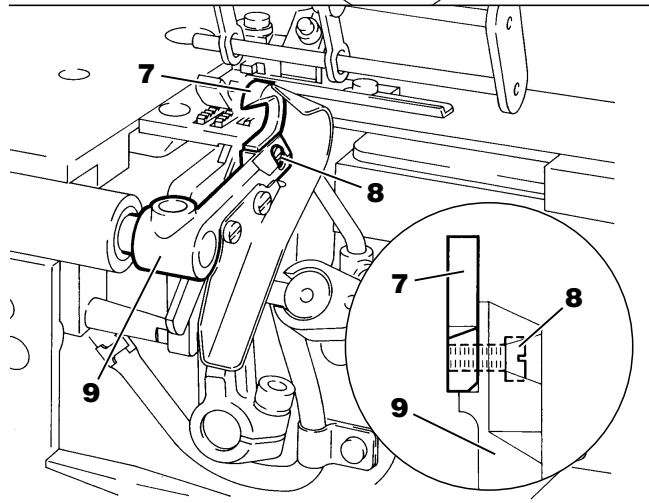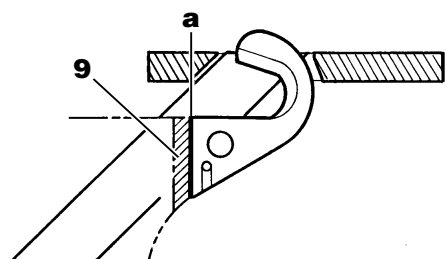


Replacing the lower knife

⚠ CAUTION

⚠ Always turn off the power and shut down the air compressor first, and then well-qualified technicians should replace the knives.

⚠ Pay close attention to the knife edges not to injure your hands and/or finger.

1. Remove the side cover. Loosen screw 2. Remove lower knife 1. Replace it with the new one.
2. Move upper knife holder 3 away to the right. Fit lower knife 1 onto the groove on lower knife holder 4. Check to see if the cutting edge is flush with the top surface of the needle plate. Tighten screw 2.

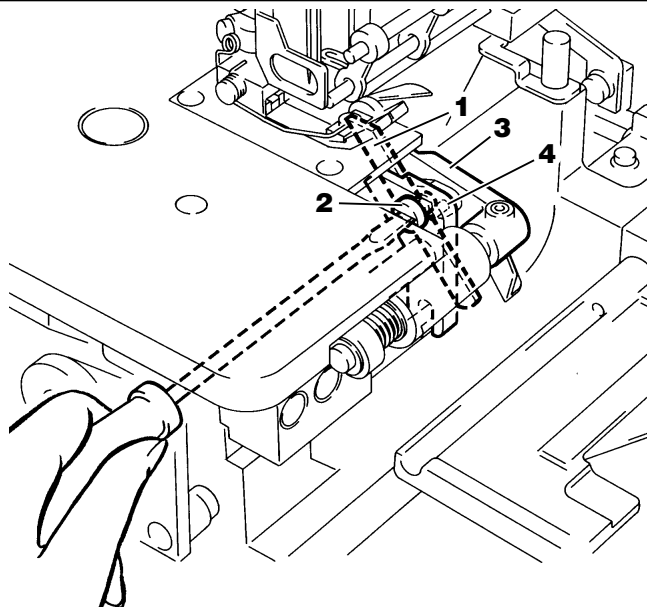



Adjusting overlap of the knife cutting edges

⚠ CAUTION

⚠ Always turn off the power and shut down the air compressor first, and then well-qualified technicians should adjust overlap of the knife cutting edges.

⚠ Pay close attention to the knife edges not to injure your hands and/or finger.

Turn the machine pulley until the upper knife is at the bottom of its travel. Obtain 0.5mm overlap of the upper and lower knives (see **a** in the illustration). Adjustment is made by loosening screw 6, moving upper knife holder 5 up or down. After this adjustment tighten screw 6.

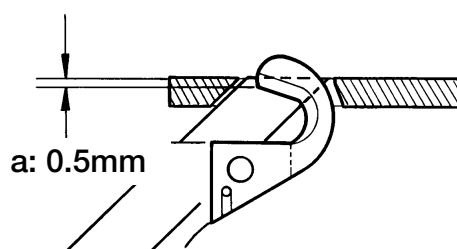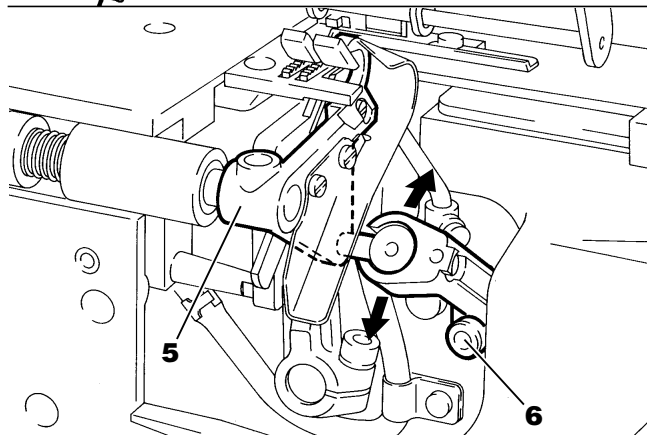

Adjusting the lower knife holder left to right



⚠ CAUTION

⚠ Always turn off the power and shut down the air compressor first, and then well-qualified technicians should adjust the lower knife holder left to right.

The distance from the right needle to where the fabric is to be cut is determined by left-to-right position of lower knife holder 4.

Adjustment is made by loosening screw 7 and turning adjustment screw 8 as required.


To move lower knife holder 4 to the left, turn adjustment screw 8 clockwise. To move lower knife holder 4 to the right, turn adjustment screw 8 counterclockwise. Loosen screw 9 and move auxiliary presser foot 10 to the left or right while moving the lower knife holder. After this adjustment tighten screws 7 and 9.

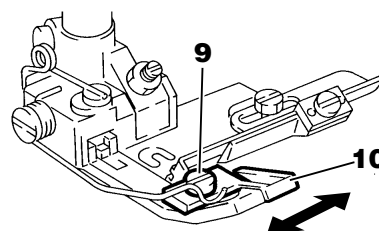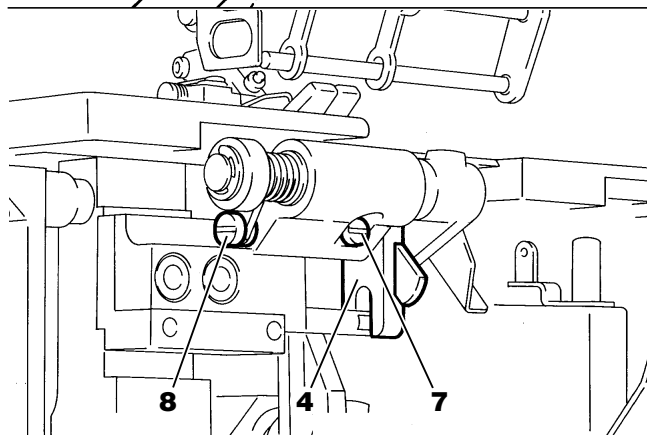

MD device (for W1562-05)

Installing the lace guide

Remove screw **1**. Install the lace guide by referring to sequence **2** to **5** in the illustration on the right.

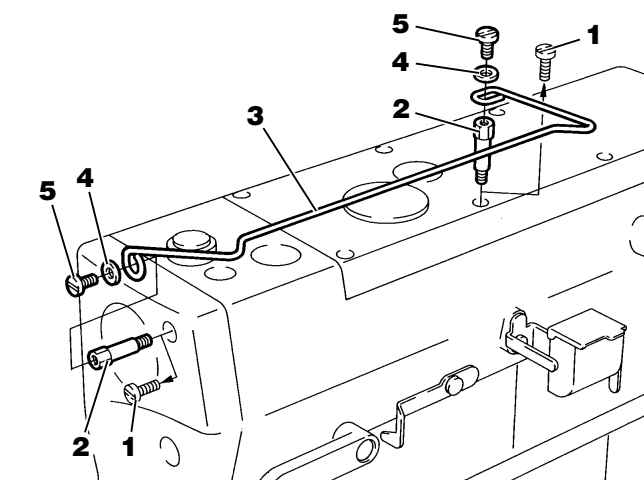

Greasing

CAUTION




Always turn off the power, unplug the machine and then well-qualified technicians should lubricate the machine.

Put grease on the clutch and the bearing before they lack the grease.


To put grease on the clutch

Turn the machine pulley until mark **A** is aligned with mark **B**. Remove screw **6**. Then put the proper amount of grease on the clutch.

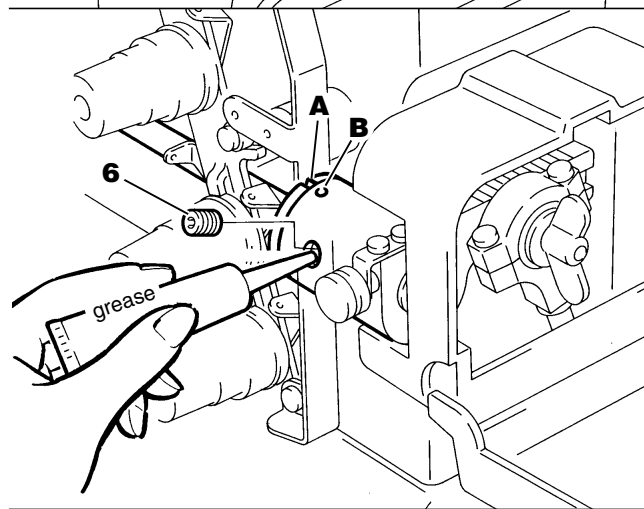

To put grease on the bearing

Remove screw **7**. Then put the proper amount of grease on the bearing.

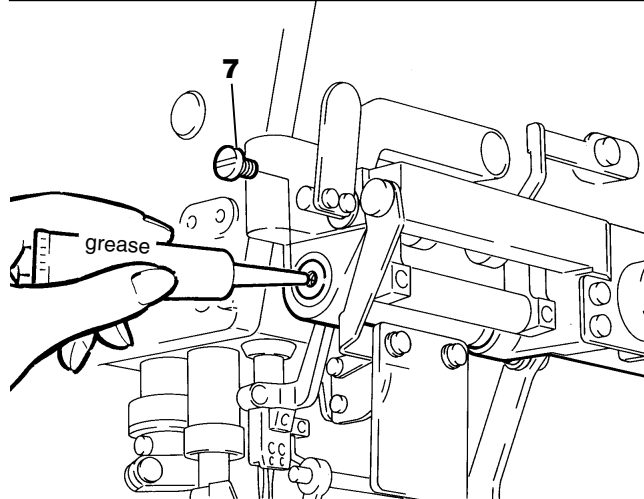


Adjusting the lace guide (lower)

CAUTION



Always turn off the power, unplug the machine and then well-qualified technicians should adjust the lace guide (lower).

Bring lace guide (lower) **8** as close to the needles as possible. Check that lace guide (lower) **8** does not contact the spreader. Adjustment is made by loosening screw **9** and turning stopper **10** as required. After this adjustment tighten screw **9**.

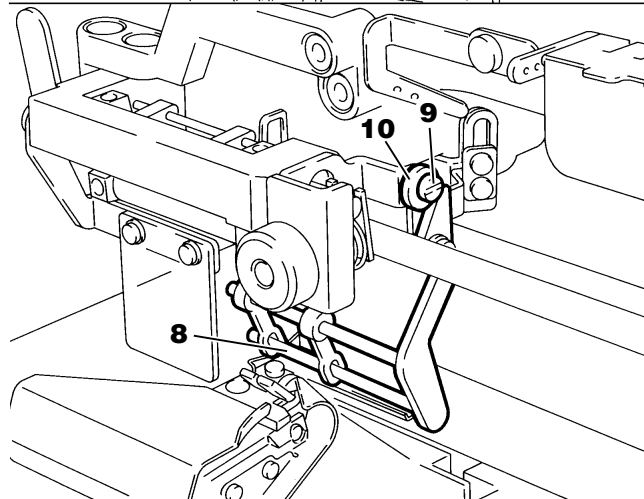

Adjusting the elastic guide

⚠ CAUTION

Always turn off the power, unplug the machine and then well-qualified technicians should adjust the elastic guide.

To adjust elastic guides 1 and 2



To feed the elastic onto the proper position on the fabric, adjust elastic guides **1** and **2** according to the width of the elastic. Adjustment is made by loosening screws **3** and **4** and moving elastic guides **1** and **2** to the left or right. After this adjustment tighten screws **3** and **4**.

To adjust elastic guides 5 and 6

To feed the elastic that is fed from the roller straight to elastic guides **1** and **2**, adjust elastic guides **5** and **6** according to the width of the elastic. Adjustment is made by loosening screws **7** and **8** and moving elastic guides **5** and **6** to the left or right. After this adjustment tighten screws **7** and **8**.

To adjust elastic guides 9 and 10

To feed the elastic straight to elastic guides **5** and **6**, adjust elastic guides **9** and **10** according to the width of the elastic. Adjustment is made by loosening screws **11** and **12** and moving elastic guides **9** and **10** to the left or right. After this adjustment tighten screws **11** and **12**.

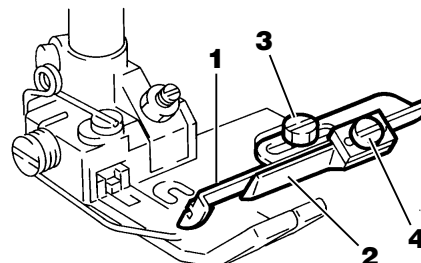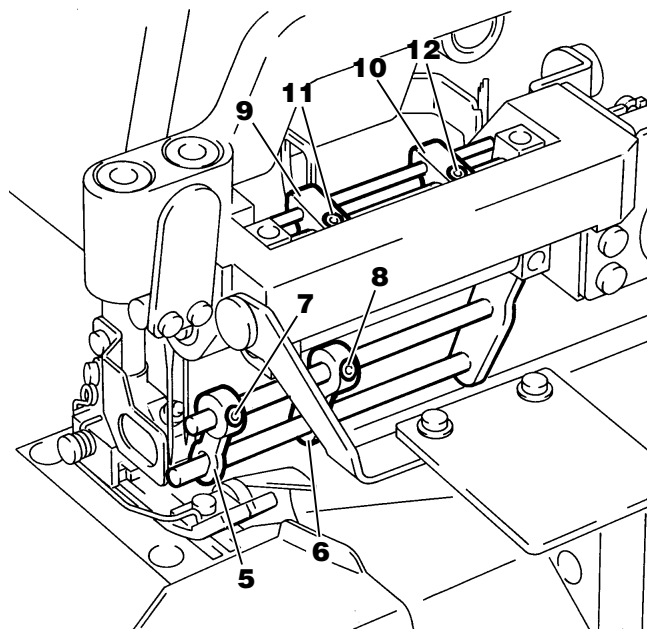

Adjusting the feeding amount of the elastic


⚠ CAUTION

Always turn off the power, unplug the machine and then well-qualified technicians should adjust the feeding amount of the elastic.

The feeding amount is adjustable from 1.0 to 2.7mm/stitch.

Adjustment is made by loosening screw **13** and turning adjustment screw **14** as required.

- To increase the feeding amount, turn adjustment screw **14** clockwise.
- To decrease the feeding amount, turn adjustment screw **14** counterclockwise.

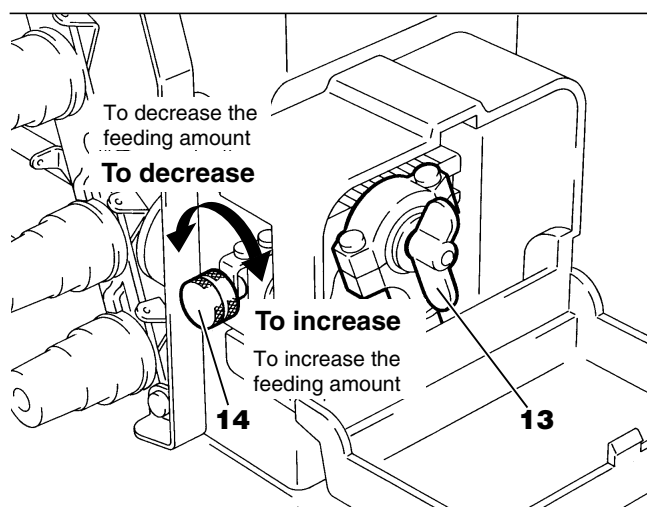


Adjusting the roller pressure

⚠ CAUTION


Always turn off the power, unplug the machine and then well-qualified technicians should adjust the roller pressure.

Adjust the roller **15** pressure according to the elastic to be used. Adjustment is made by turning adjustment screw **16** as required. To increase the roller pressure, turn adjustment screw **16** clockwise. To decrease the roller pressure, turn adjustment screw **16** counterclockwise.

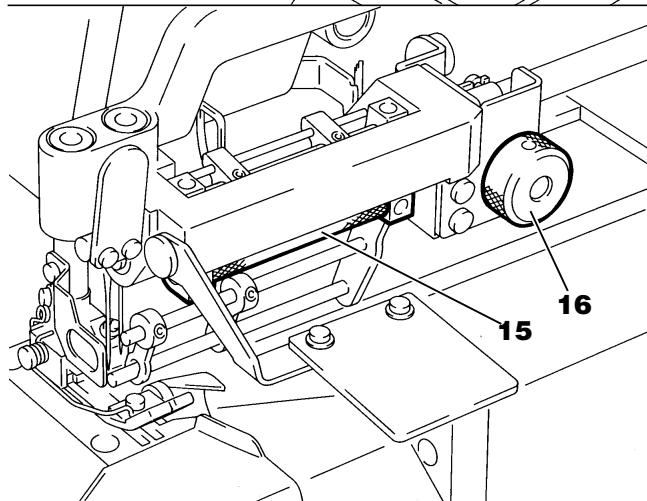


Inserting the elastic into the roller

CAUTION










 Always turn off the power and shut down the air compressor first, and then well-qualified technicians should insert the elastic into the roller.

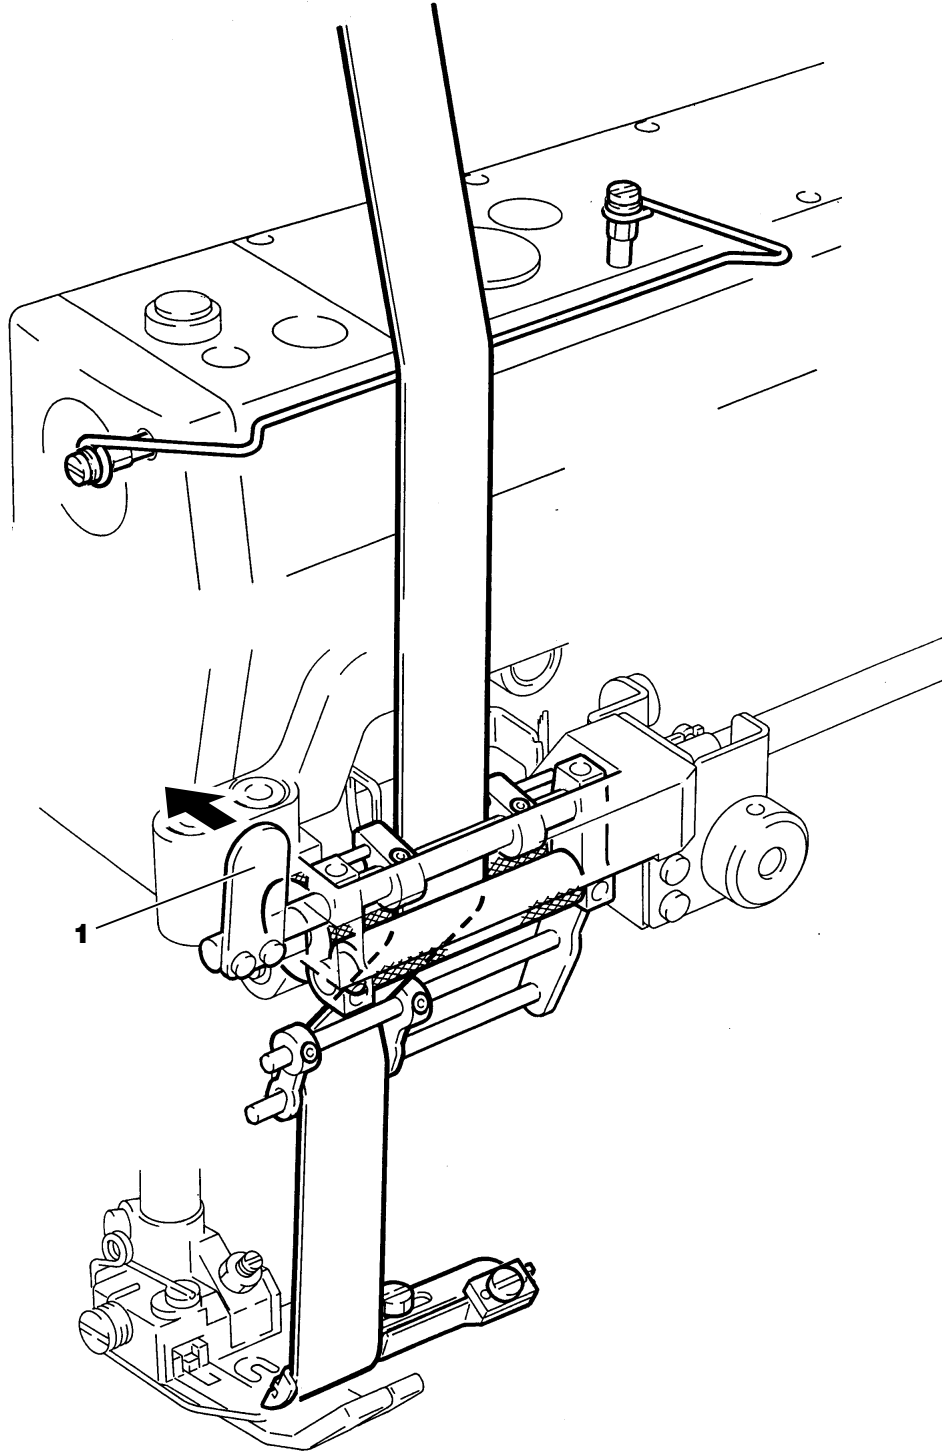Open the roller first by pressing lever **1**. Then insert the elastic into the roller (see the illustration).



Adjustment dimentions

(mm)

	×□□□□	S  T 							
W1562-01J -02G -05B	232□	S	Standard lift	9.8	4.6~4.9	8.8	5.0	17.0	0.8~1.2
		T	//	9.3					
	240□	S	Standard lift	9.3	4.2~4.5	8.8	5.0	17.0	0.8~1.2
		T	//	8.8					
	248□ (-01J not included)	S	Standard lift	8.9	3.8~4.1	8.8	5.0	17.0	0.8~1.2
		T	//	8.4					
	356□	S	Standard lift	8.5	3.4~3.7	8.8	5.0	17.0	0.8~1.2
		T	//	8.0					
	364□	S	Standard lift	8.1	3.0~3.3	8.8	5.0	17.0	0.8~1.2
		T	//	7.6					

S : Needle plate finger 2.8mm thick (washer used onto looper)

T : Needle plate finger 3.3mm thick

Comparison table of equivalent sizes

Japanese size (Organ)	#	9	10	11	14	16	18	21
Metric size (Schmetz)	Nm	65	70	75	90	100	110	130

Standard needle

W1562-01J -02G -05B	×□□□□	Organ UY128GAS
	232□	9S
	240□	9S
	248□	9S
	356□	10S
	364□	10S

W1500 Series subclass specifications

W1500 Series



Application	Subclass	Number of needles	Number of threads	Needle space (mm)	Max. stitch length (mm)	Diff. feed ratio	Presser foot lift (mm)	Max. speed (rpm)	Remarks
Versatile	W1562-01J	2	4	3.2・4	4.4	0.5~1.3	6.3	6,000	
		3	5	5.6・6.4	4.4	0.5~1.3	6.3	6,000	
Binding tape	W1562-02G	2	4	3.2・4・4.8	4.4	0.5~1.3	6.3	6,000	
		3	5	5.6・6.4	4.4	0.5~1.3	6.3	6,000	
Attaching elastic lace	W1562-05B	2	4	3.2・4	4.4	0.5~1.3	5.3	5,500 (5,000 with MD)	
		3	5	5.6・6.4	4.4	0.5~1.3	5.3	5,500 (5,000 with MD)	

*If you use the machine with a differential feed ratio of more than 1:1.3, the main feed dog movement amount should be less than 2.5mm.

Stitch type	602, 605
Needle size	UY128GAS #9S UY128GAS #10S
Machine size (WxDxH)	W : 520mm D : 265mm H : 395mm

Net weight (head only)	44.4Kg
Gross weight (with accessories)	50.4Kg
Working noise level	n=5,400rpm : LpA≤78.0dB Noise measurement according to DIN 45635 48A-1

PEGASUS SEWING MACHINE MFG. CO., LTD.

5-7-2, Sagisu, Fukushima-ku, Osaka 553-0002, Japan. Phone : (06)6458-4739
Telefax : (06)6454-8785

Cat. No. 9A2175E1 July 2002

©2002 PEGASUS SEWING MACHINE MFG. CO., LTD.

The description in this INSTRUCTIONS is subject to change without prior notice for improvement.